F Series IP Camera Web Operation Manual Version2.1

For F725/F726/F715/F665/F645/F625 series only

Table of Contents

1 Network Connection 4

2 Main Interface Introduction 5

2.1 Log in 5

2.2 Monitor Channel Menu Tree 8

2.3 System Menu 10

2.4 Monitor Window Switch 10

2.5 Preview Window Switch 11

2.6 PTZ Control 11

2.7 Color and More Setup 14

3 Configure 16

3.1 System Information 16

3.1.1 Version Information 16
3.1.2 HDD information 16
3.1.3 Log 17

3.2 System Configuration 18

3.2.1 General Setup 18
3.2.2 Encode 20
3.2.3 Schedule 24
3.2.4 RS232 25
3.2.5 Network 27
3.2.6 Alarm 32
3.2.7 Detect 34
3.2.8 PTZ 37
3.2.9 Default & Backup 38

3.3 Advanced 39
3.3.1 HDD Management 39
3.3.2 Alarm I/O 40
3.3.3 Record 40
3.3.4 Account 41
3.3.5 Auto Maintenance 42
3.3.6 Snapshot 42
3.3.7 Abnormity 43
3.4 Additional Function 45
3.4.1 Configure 45
3.4.2 Auto Register 47
3.4.3 Talk Encode 47
3.4.4 IP Filter 48
3.4.5 DNS 48
3.4.6 Wireless Network (For –W series only) 49
3.4.7 CDMA/GPRS (For –T/E/C series only) 51
3.4.8 Mobile Configuration (For –T/E/C series only) 53
4 Search 56
5 Alarm 59
6 About 61
7 Log out 62
8 Appendix No-IP DDNS 63

1 Network Connection

This series IPC product support the Web access and management via PC.

Web includes several modules: monitor channel list, record search, alarm setup, system configuration, PTZ control, monitor window and etc.

IP camera factory default setup:

- IP address: 192.168.1.108.
- User name: admin
- Password: admin

Please follow the steps listed below for network connection.

- Make sure the IPC has connected to the network properly.
- IPC IP address and PC IP address shall be in the same network segment. IPC default IP address is 192.168.1.108. If there is router, please set the corresponding gateway and subnet mask.
- Use order ping ***.***.***.***(* IP camera address) to check connection is OK or not.

2 Main Interface Introduction

2.1 Log in

Open IE and input IPC IP address in the address column. For example, if your IP camera is 192.168.1.108, then please input http:// 192.168.1.108 in IE address column. See Figure 2-1

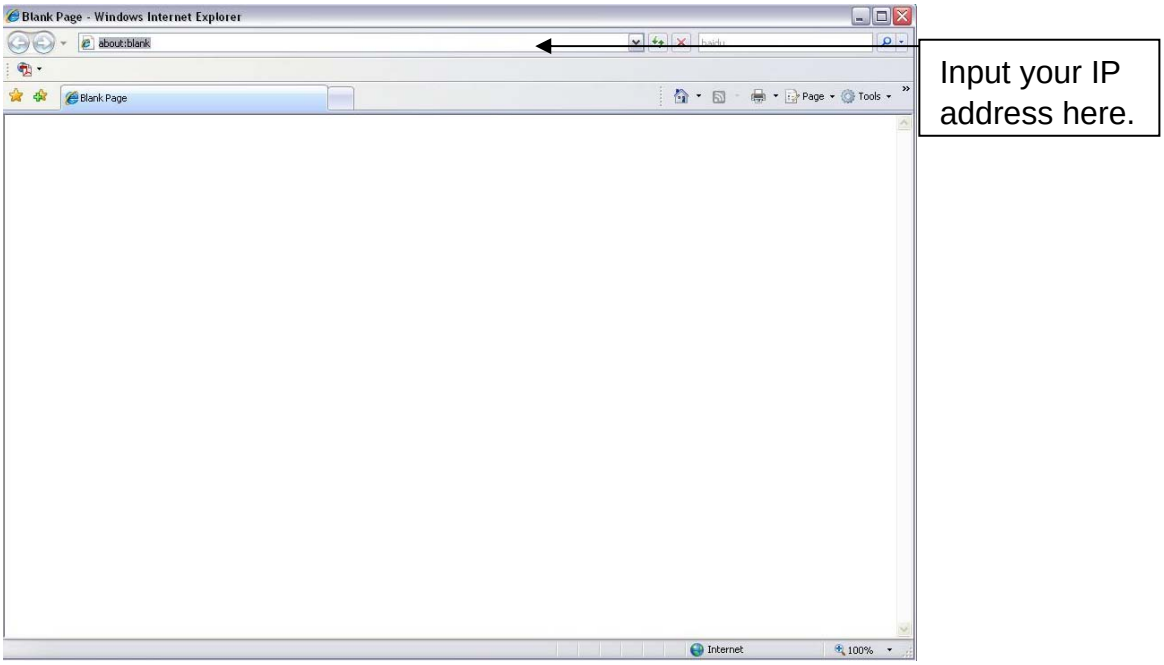

Figure 2-1

System pops up warning information to ask you whether install webrec.cab control or not. Please click yes button.

If you can't download the ActiveX file, please modify your settings as follows. See Figure 2-2.

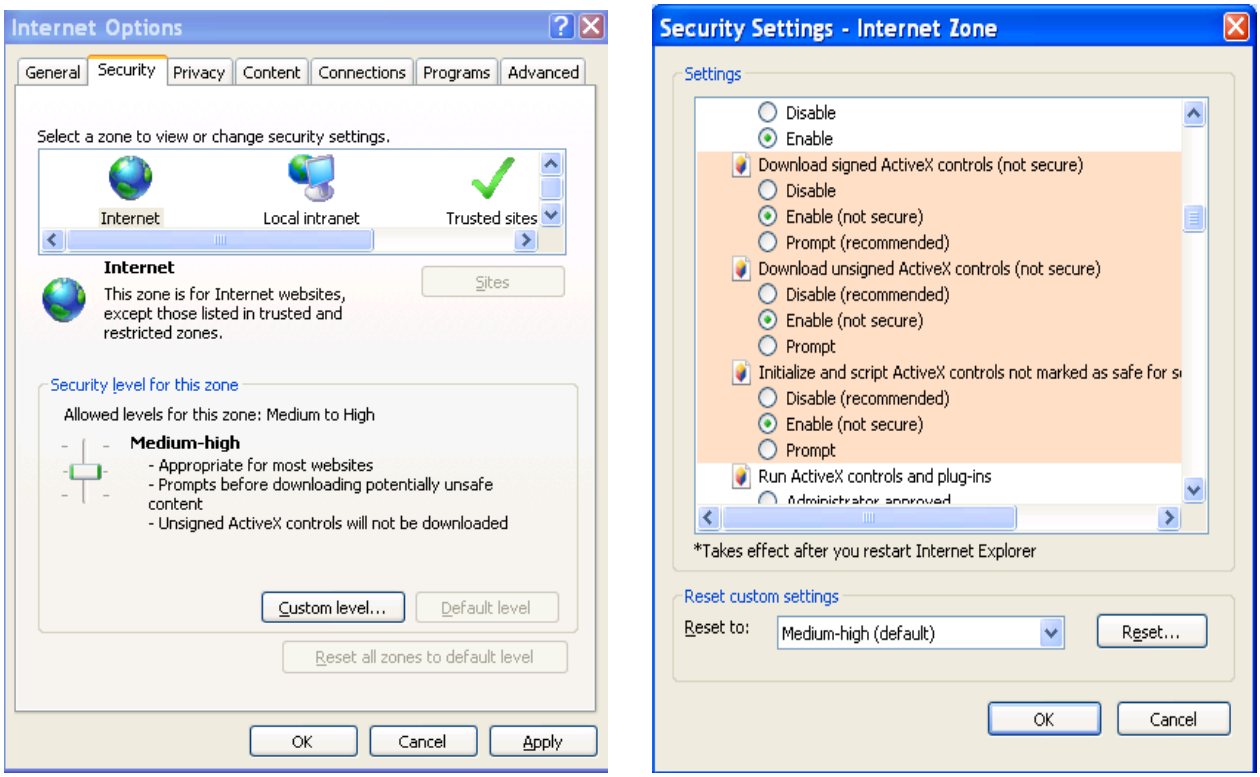

Figure 2-2

After installation, the interface is shown as below. See Figure 2-3.

Please input your user name and password.

Default factory name is admin and password is admin.

Note: For security reasons, please modify your password after you first login.

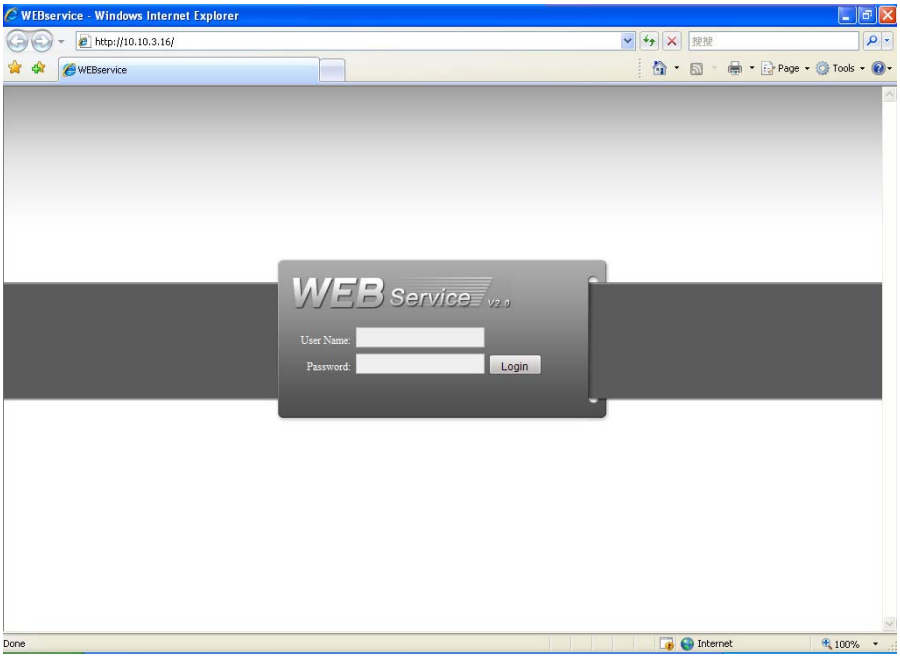

Figure 2-3

After you logged in, IPC web main interface is shown as in Figure 2-4.

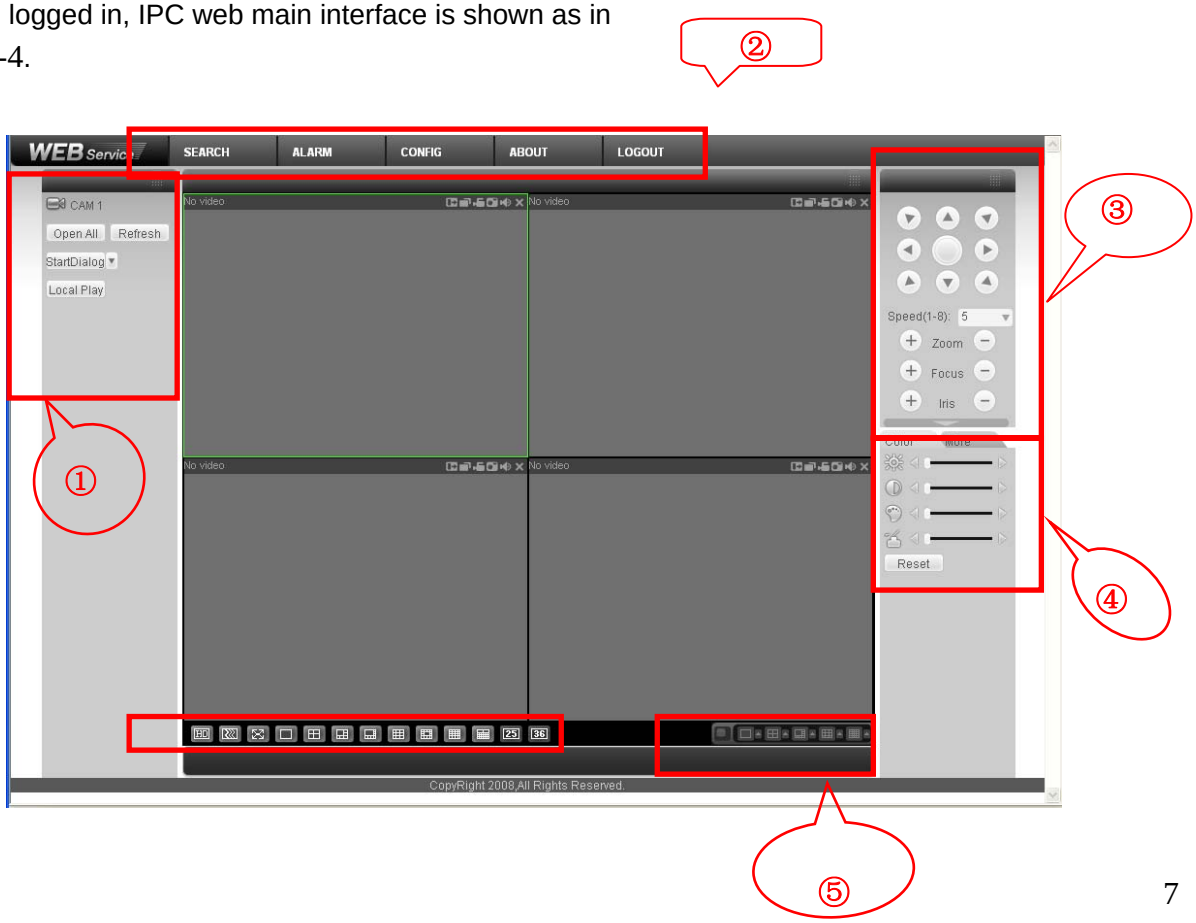

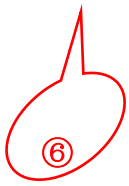

Figure 2-4 Web Main Interface

There are six sections:

- Section 1: Monitor channel menu tree
- Section 2: System menu
- Section 3: PTZ control
- Section 4: Video setup and other setup
- Section 5: Preview window
- Section 6: Monitor window switch

2.2 Monitor Channel Menu Tree

The monitor channel menu tree is shown as in Figure 2-5.

Figure 2-5 Monitor Channel Menu Tree

Please refer to the following sheet for detailed information.

Parameter	Function
Channel 1	Monitor channel 1 IPC supports main stream and extra stream. ● Main stream: In normal network width environment, main stream can record video and audio and realize network monitor. ● Extra stream: If network width is not sufficient, you can use extra stream to realize network monitor. Please note the extra stream resolution shall be less than main stream resolution.
Open all /close all	Click this button to open all video channels. Once all video channels are open, it becomes close all button.
Start dialogue	You can click this button to enable audio talk. Audio compression type: G.711a (default), AMR and etc
Local play	Click local play button to select file to play in PC.

Refresh	Click this button to refresh monitor channel name.

Please left click one monitor to view real-time video, the monitor window is shown as in Figure 2-6.

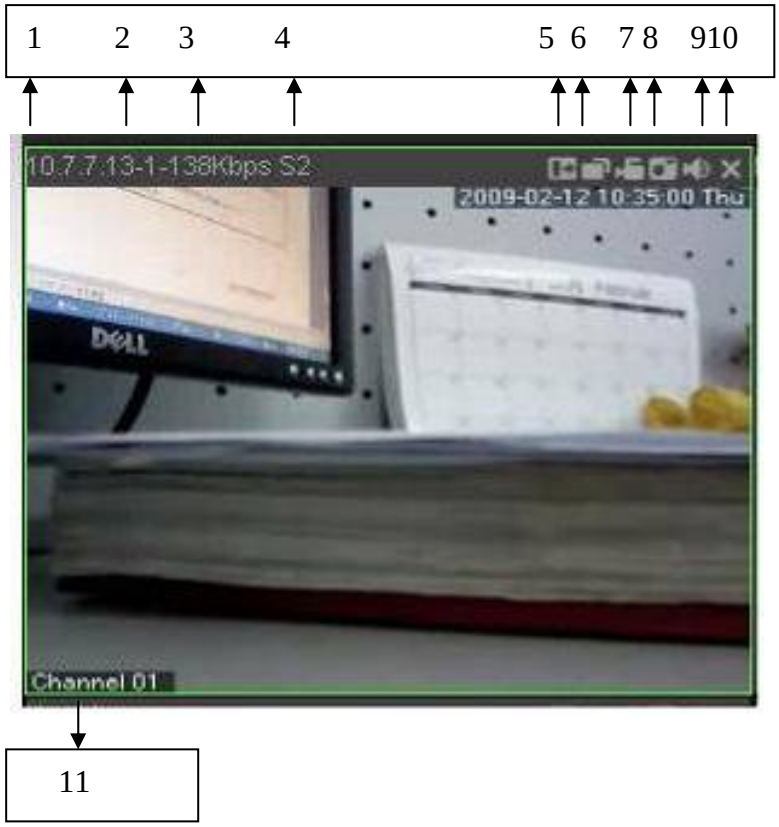

Figure 2-6 Real-time Monitor

Please refer to the following sheet for monitor window parameter information.

SN	Parameter	Function
1-4	Display device information	● 1: IPC IP address. ● 2: Channel number. ● 3: Bit stream. ● 4: Stream decode type. ➢ S1: Overlay. ➢ S2: Off stream. ➢ S3:GD1 ➢ H1: Overlay ➢ H2: off stream decoding from the display card.
5	Digital zoom	Click this button and then left drag the mouse in the zone to zoom in. Right click mouse system restores original status.
6	Change show mode	Resize or switch to full screen mode.

7	Local record	When you click local record button, the system begins recording. The recorded file is saved to system folder: \ RecordDownload(default). You can go to chapter 2.7 to modify the local record save path. The playback bar is shown as below.  1- Playback process control 2- Play 3- Pause 4- Stop 5- Slow play 6- Fast play Please note, once you selected window is in real-time monitor mode, system automatically switches to playback the video by default.
8	Capture picture	You can snapshoot important video. All images are memorized in system folder: \ picture download (default).
9	Audio	Turn on or off audio.(It has no relationship with system audio setup)
10	Close video	Close video in current window.
11	Channel number	Current view channel number.

2.3 System Menu

System menu is shown as in Figure 2-7.

Please refer to chapter 3 Configuration, chapter 4 Search, chapter 5 Alarm, chapter 6 About, chapter 7 Log out for detailed information.

Figure 2-7 System Menu

2.4 Monitor Window Switch

The monitor window switch interface is shown as in Figure 2-8.

Figure 2-8 Monitor Window Switch

System supports 1/4/6/8/9/13/16/20/25/36-window real-time preview.

----It is video quality adjustment button. It has relationship with decode via software.

--Fluency button. You can use this function to adjust the priority between real-time and fluency.

2.5 Preview Window Switch

The preview window switch interface is shown as in Figure 2-9.
IPC series products **do not** support this function.

Figure 2-9 Preview Window Switch

2.6 PTZ Control

Before PTZ operation, please make sure you have properly set PTZ protocol. (Please refer to chapter 3.2.8 PTZ).
Here you can view direction keys, speed, zoom, focus, iris, preset, tour, pan, scan, pattern, aux close, and PTZ setup button.
Please note: open menu/close menu/up/down/left/right/confirm/cancel buttons are for speed dome only.

- PTZ direction: PTZ supports eight directions: left/right/up/down/upper left/upper right/bottom left/bottom right.
- Speed: The step 8 speed is faster than step 1.

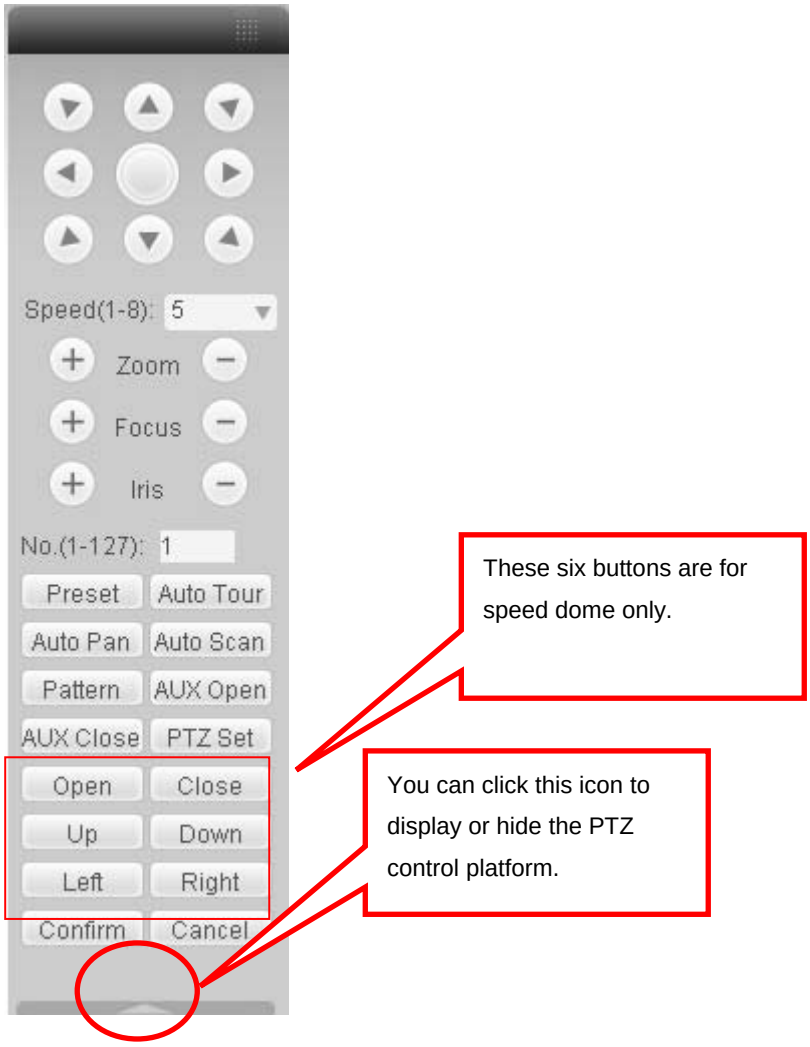

Figure 2-10 PTZ Interface

Click PTZ set button, the interface is shown as in Figure 2-11.

Figure 2-11 PTZ Setup

Please refer to the following sheet for PTZ setup information.

Parameter	Function
Scan	● Move the camera to you desired location and then click left limit button. ● Then move the camera again and then click right limit button to set a right limit.
Preset	Use direction keys to move the camera to your desired location and then input preset value. Click add button, you have set one preset. The preset value ranges from 1 to 80. (It may vary due to different protocols.)
Tour	● Input auto tour value and preset value. Click add button, you have added one preset in the tour. ● Repeat the above procedures you can add more presets in one tour. ● Or you can click delete button to remove one preset from the tour. The tour value ranges from 1 to 8. (It may vary due to different protocols.)
Pattern	You can input pattern value and then click start record button to begin PTZ movement. Please go back to Figure 2-10 to implement camera operation. Then you can click stop record button in Figure 2-11. Now you have set one pattern.
Assistant	The assistant items include: BLC, Digital zoom, day/night mode, camera brightness, flip. You can select one option and then click start or stop button.

Parameter	Function
Matrix	Please select the matrix X, and then input the corresponding monitor output number, video input channel number, then you can click video switch button to complete the operation.

2.7 Color and More Setup

Color and other setup interface are shown as in Figure 2-12.

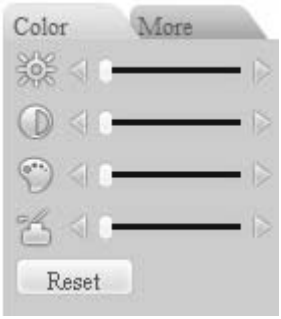

Figure 2-12 Color

Please refer to the following sheet for detailed information.

Parameter		Function	
Video setup		It is to adjust monitor video brightness.	Note: ● All the operations here apply to WEB end only. ● Please go to chapter 3.2.2 System configuration->Encode setup->color setting to adjust corresponding system items.
		It is to adjust monitor video contrast ness.	
		It is to adjust monitor video saturation.	
		It is to adjust monitor video hue.	

Click more button, the interface is shown as in Figure 2-13.

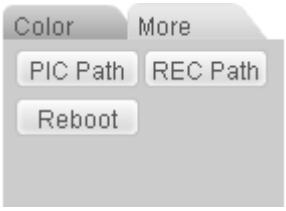

Figure 2-13 Color and More

Please refer to the following sheet for detailed information.

Parameter		Function
More	Picture Path	Click picture path button, system pops up an interface for you to modify path.
	Record Path	Click record path button, system pops up an interface for you to modify path.
	Reboot	Click this button, system pops up a dialogue box, please click OK button to reboot device.

3 Configure

3.1 System Information

3.1.1 Version Information

Here you can view device hardware feature and software version information. See Figure 3-1.

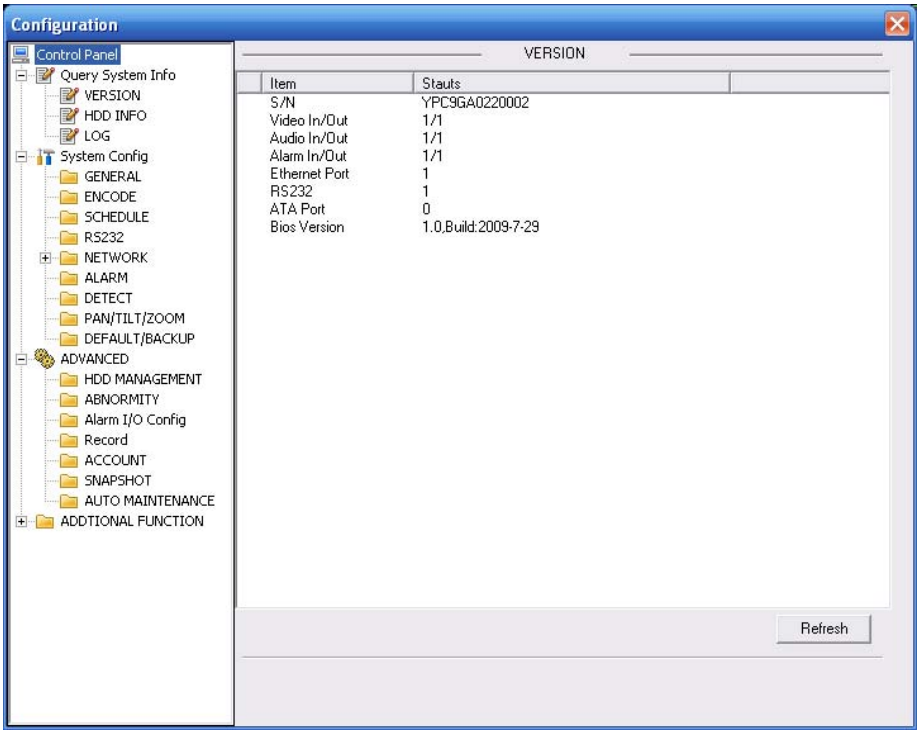

Figure 3-1 Version Information

3.1.2 HDD information

Here you can view local storage status and network status including, free capacity and total capacity. See Figure 3-2.

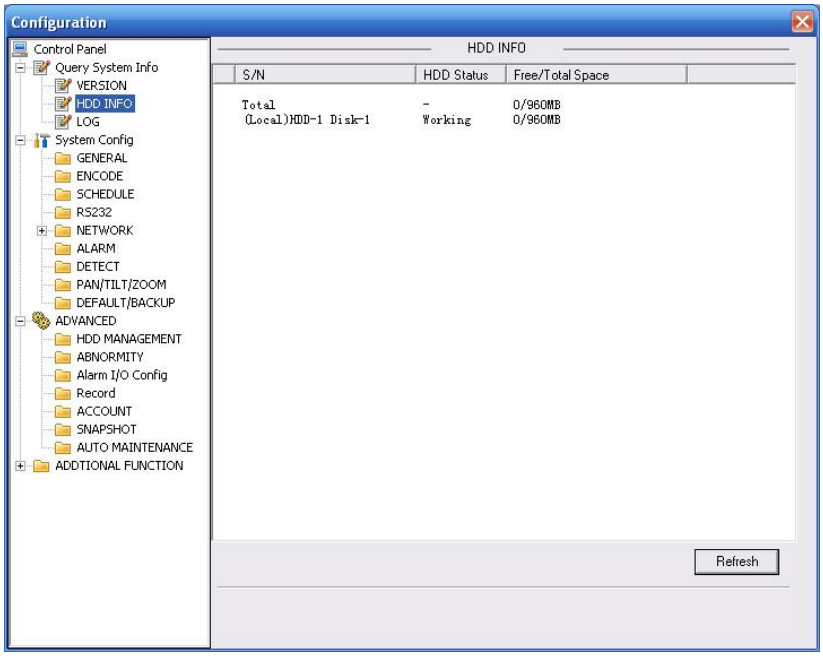

Figure 3-2 HDD Information

3.1.3 Log

Here you can view system log. See Figure 3-3.

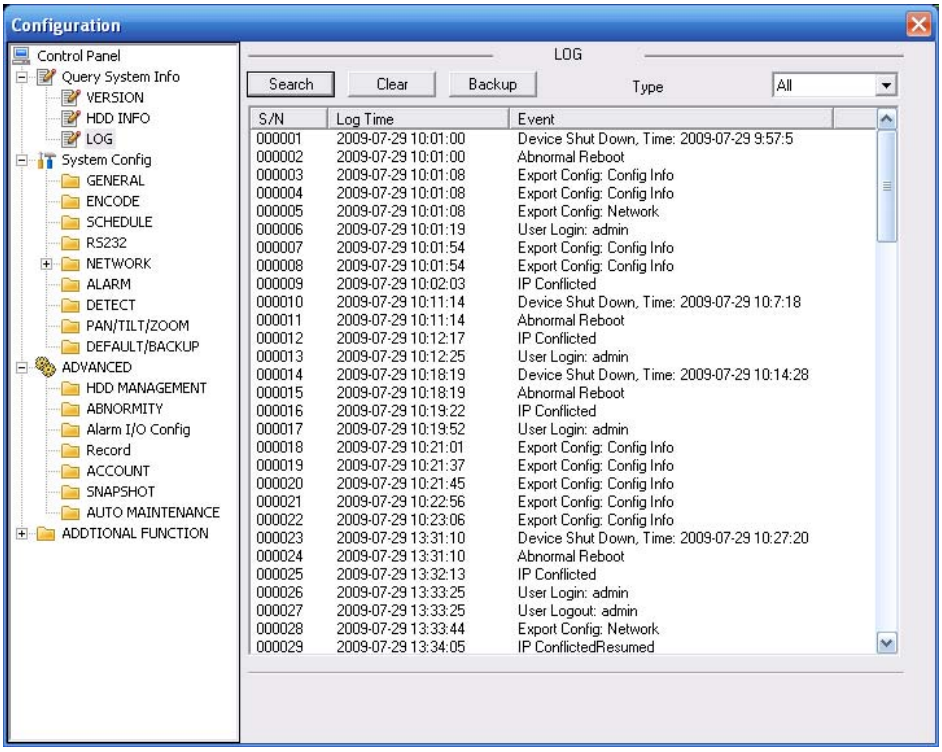

Figure 3-3 Log

Click backup button, the interface is shown as in Figure 3-4.

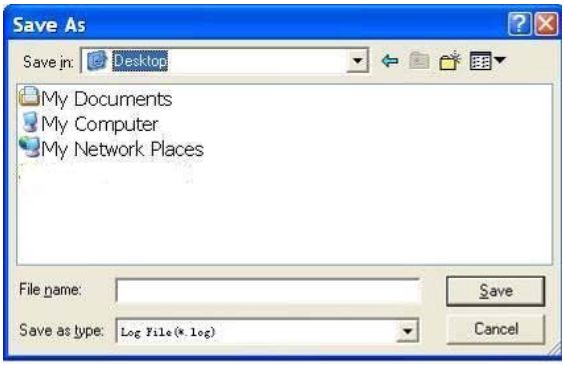

Figure 3-4 Save Log

Please refer to the following sheet for log parameter information.

Parameter	Function
Type	Log types include: system operation, configuration operation, data management, alarm event, record operation, user management, log clear and file operation.
Search	You can select log type from the drop down list and then click search button to view the list.
Clear	You can click this button to delete all displayed log files. Please note system does not support clear by type.
Backup	You can click this button to backup log files to current PC.

3.2 System Configuration

Please click save button to save your current setup.

3.2.1 General Setup

Here you can set system time, record length, video format and etc. See Figure 3-5.

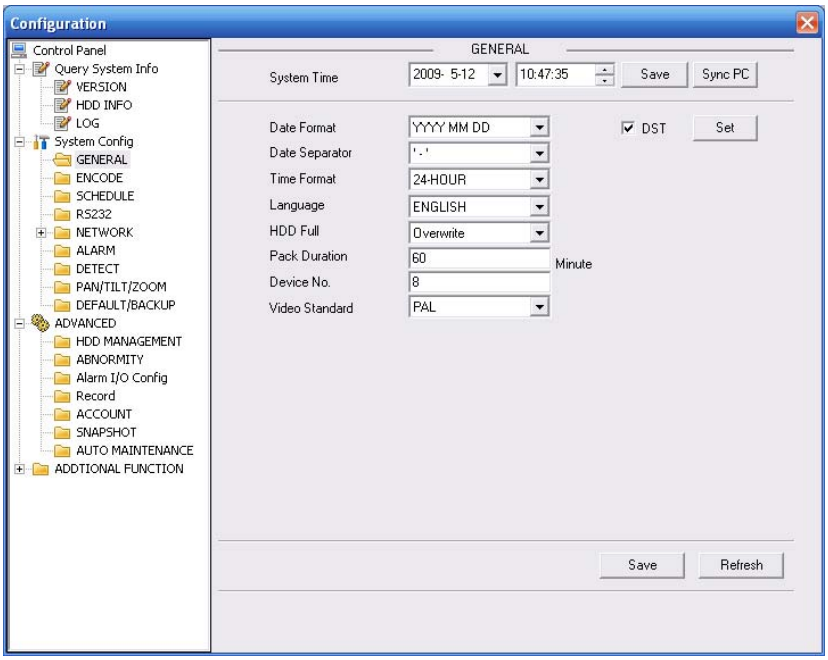

Figure 3-5 General Setup

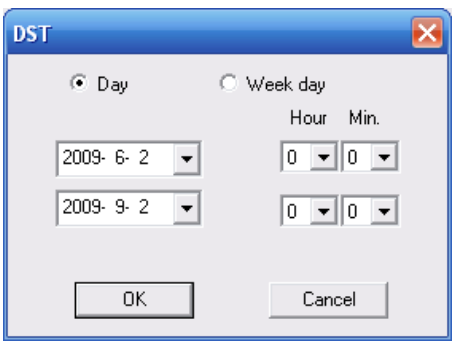

Figure 3-6 DST

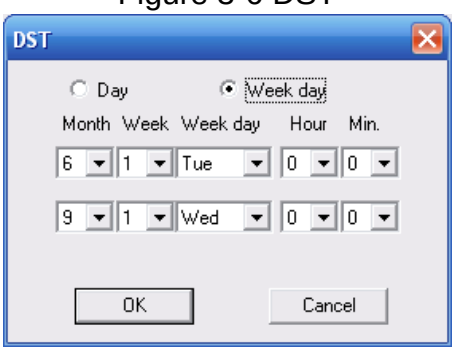

Figure 3-7 DST

Please refer to the following sheet for detailed information.

Parameter	Function
System Time	Here is for you to modify system time. Please click Save button after your completed modification
Sync PC	You can click this button to save the system time as your PC current time.
Data Format	Here you can select data format from the dropdown list.
Data Separator	Please select separator such as – or /.
Time Format	There are two options: 24-H and 12-H.
DST	Here you can set day night save time begin time and end time. See Figure 3-6 and Figure 3-7.
Language	You can select the language from the dropdown list. Device needs to reboot to get the modification activated.
HDD Full	There are two options: stop recording or overwrite the previous files when HDD is full.
Pack Duration	Here you can select file size. Default setup is 60 minutes.
Device No	When you are using one remote control to manage multiple devices, you can give a serial numbers to the device. Please note current series IPC **does not** support this function.
Video Standard	This is to display video standard such as PAL.

3.2.2 Encode

Encode interface is shown as in Figure 3-8.

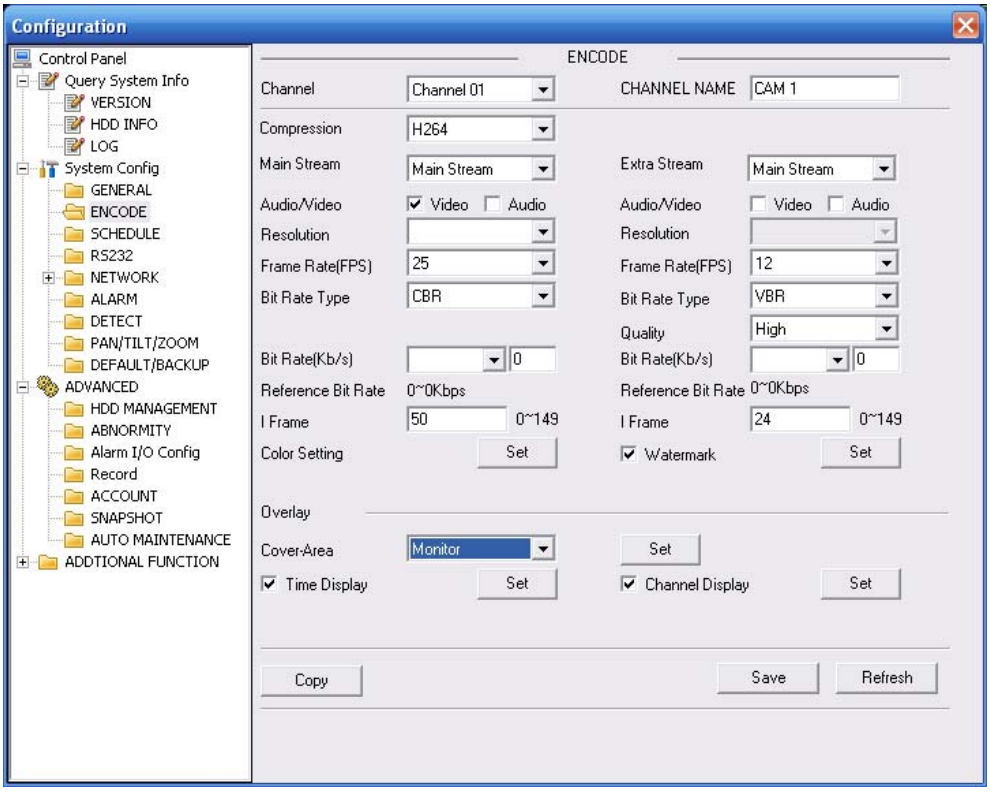

Figure 3-8 Encode

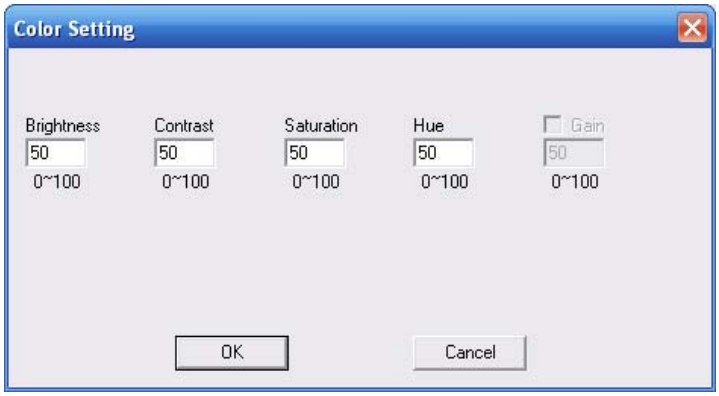

Figure 3-9 Color Setting

Click watermark button, you can see an interface is shown as below.

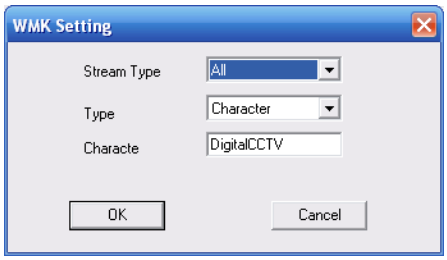

Figure 3-10 Watermark

Please refer to the following sheet for detailed information.

Parameter	Function
Channel	Here is for you to select a monitor channel.
Channel Name	Here is to display current channel name. You can modify it .
Compression	H.264
Main Stream	It includes general stream, motion stream and alarm stream. You can select different encode frame rates form different recorded events. System supports active control frame function (ACF). It allows you to record in different frame rates. For example, you can use high frame rate to record important events, record scheduled event in lower frame rate and it allows you to set different frame rates for motion detection record and alarm record.
Extra Stream	Select extra stream if you enabled the extension stream to monitor.
Audio/Video	Main stream: Recorded file only contains video by default. You need to check the audio box here to enable audio function. Extra stream: Recorded file only contains video by default. You need to check the audio box here to enable audio function.
Resolution	The options include: UXGA/1.3M/720/D1/HD1 /CIF/QCIF. The main stream and extra stream resolution may not be the same.
Frame Rate	● F726 series：PAL: 1～12.5f/s，NTSC: 1～15f/s.(Now system supports 1～12.5f/s）. ● F725/F715/F6X5 series：PAL: 1～25f/s，NTSC: 1～30f/s.. The frame rate may vary due to different resolutions.
Bit Rate Type	There are two options: VBR and CBR. Please note, you can set video quality in both modes.

Parameter	Function
Quality	The value ranges from 1 to 6. The level 6 is the best video quality.
Bit Rate	• In CBR, the bit rate here is the max value. In dynamic video, system needs to low frame rate or video quality to guarantee the value. • The value is null in VBR mode. • Please refer to recommend bit rate for the detailed information.
Recommended Bit	Recommended bit rate value according to the resolution and frame rate you have set.
I Frame	Here you can set the P frame amount between two I frames. The value ranges from 1 to 150. F725/F715/F6X5 series default value is 50 and F726 series default value is 24. Recommended value is frame rate *2.
Color Setting	Here you can set video brightness, contrast ness, hue, saturation and gain. The value ranges from 0 to 100. Default value is 50.See Figure 3-9. Please note gain value is read only.
Watermark	Here you can select watermark bit stream, watermark mode and watermark character. Default character is DigitalCCTV. See Figure 3-10.
Cover area (privacy mask)	• Here you can privacy mask the specified video in the monitor video. • System max supports 8 privacy mask zones.
Time Title	• You can enable this function so that system overlays time information in video window. • OSD transparent value ranges from 0 to 255. 0 means complete transparent. • You can use the mouse to drag the time tile position.
Channel Title	• You can enable this function so that system overlays channel information in video window. • OSD transparent value ranges from 0 to 255. 0 means complete transparent. • You can use the mouse to drag the channel tile position.
Save	You can click save button after you complete setup for one item, or you can complete the whole setups and then click save button.
Refresh	Click this button to get device latest configuration information.

3.2.3 Schedule

Here you can set different periods for various days. There are max six periods in one day. See Figure 3-11.

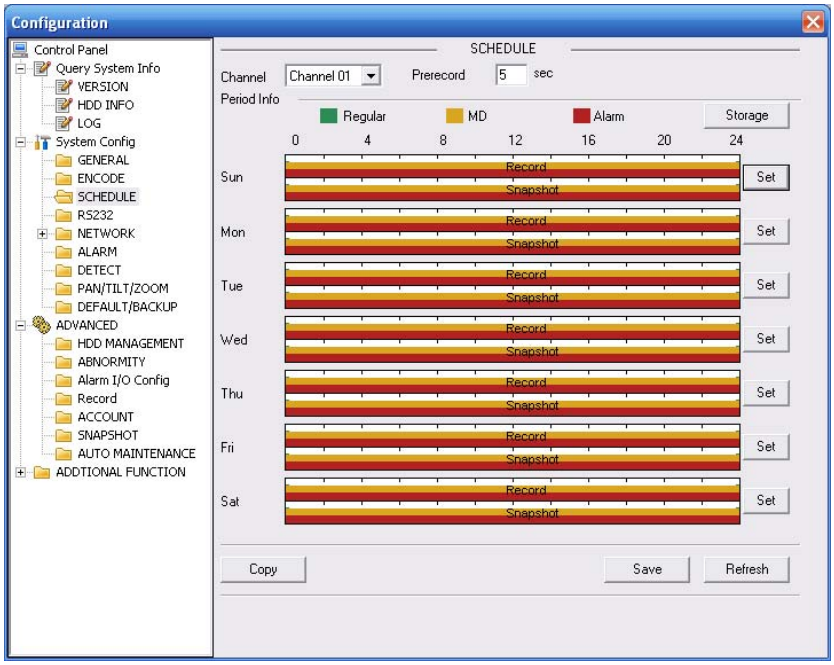

Figure 3-11 Schedule

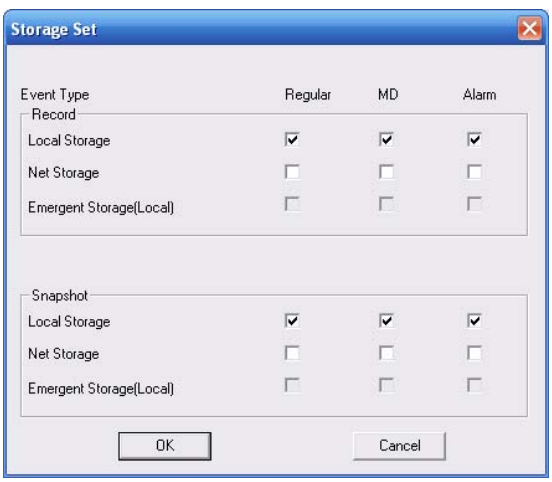

Figure 3-12 Storage Set

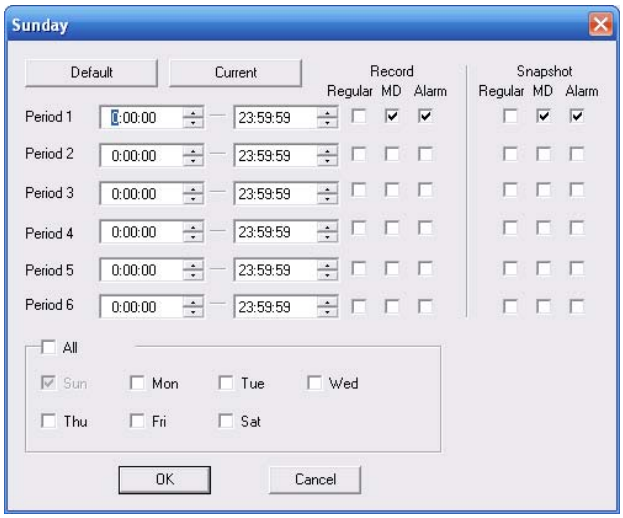

Figure 3-13 Schedule Time

Please refer to the following sheet for detailed information.

Parameter	Function
Channel	Please select a channel first.
Pre-record	Please input pre-record value here. System can record the three to five seconds video before activating the record operation into the file. (Depends on data size).
Storage	Right now this series product support local storage mode (record/snapshot).
Setup	• In Figure 3-11, click set button, you can go to the corresponding setup interface. • Please set schedule period and then select corresponding record or snapshot type: motion detection/snapshot, and alarm/snapshot. Right now system does not support schedule/snapshot function, • Please select date (Current setup applies to current day by default. You can draw a circle before the week to apply the setup to the whole week.) • After complete setup, please go back to Figure 3-11 and then click save to save current time period setup.
Save	You can click save button after you complete setup for one channel, or you can complete the whole setups and then click save button.
Refresh	Click this button to get device latest configuration information.

3.2.4 RS232

The RS232 interface is shown as in Figure 3-14.

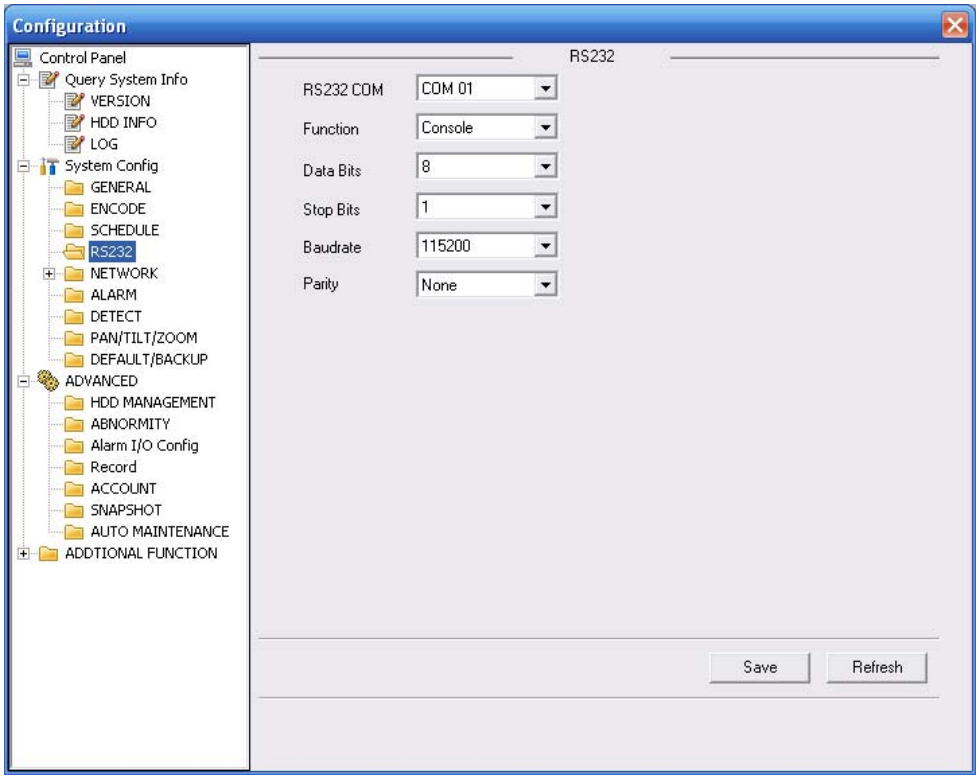

Figure 3-14 RS232

Please refer to the following sheet for detailed information.

Parameter	Function
RS232	There is only one option COM 01, corresponding to RS232.
Function	Console is for debug.
	Control keyboard: Switch between RS232 and control keyboard.
	Network keyboard: COM control protocol. You can use network keyboard to control IPC via COM.
	Transparent COM: Network user can communicate with RS232 COM device.
	Alarm box: Wireless alarm box protocol. System can use COM to communicate with the wireless alarm box.
	COM_GPS: GPS module protocol. You can connect to it to realize GPS function.
Data Bit	The value ranges from 5 to 8.
Stop Bit	There are three options: 1/2.
Baud Bit	You can select corresponding baud bit here.

Parameter	Function
Parity	There are five options: none/odd /even/mark/space.

3.2.5 Network

Network interface is shown as in Figure 3-15.

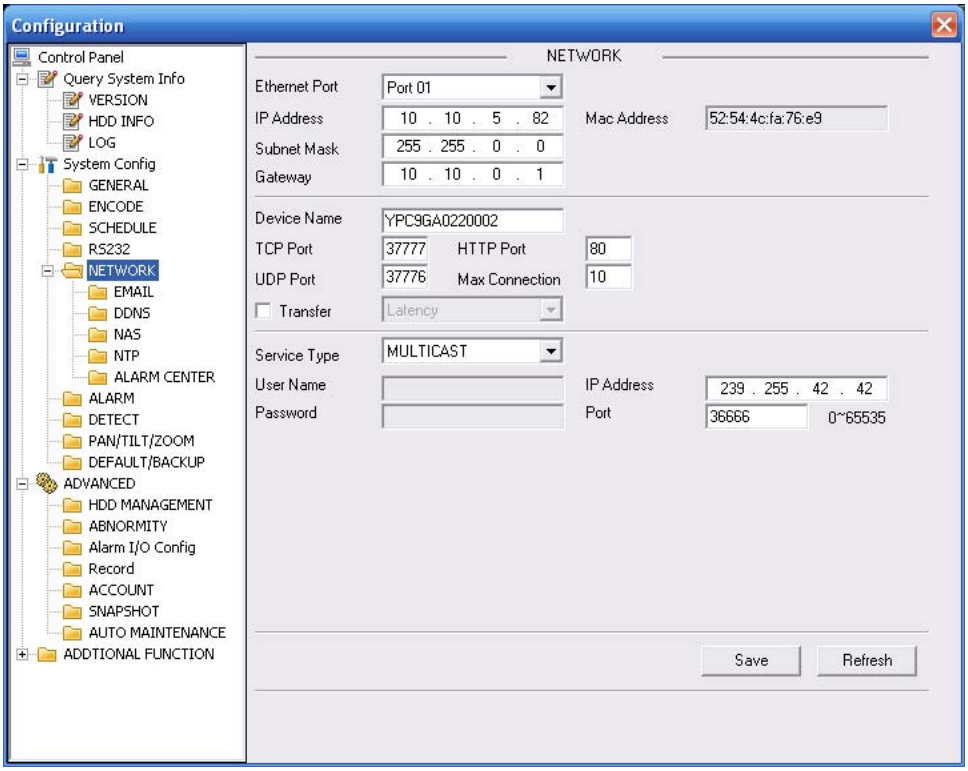

Figure 3-15 Network

Please refer to the following sheet for detailed information.

Parameter	Function
Ethernet	Please select the network card first. If you want to use wireless network, please select port 02(wireless) and then set wireless IP address and etc(For –W series only)
DHCP	Dynamically get IP address. You can get the device IP from the DHCP server if you enabled this function.
Device Name	The device ID in the network.
TCP Port	Default value is 37777.
HTTP Port	Default value is 80.

Parameter		Function
UDP Port		Default value is 37778.
Max Connection		Network user max amount. The value ranges from 1 to 10.
Network transmission QoS		You can set the priority between fluency and video quality or self-adaptive. System can automatically adjust the bit stream or lower the resolution according to the network bandwidth.
High-Speed Download		Download the recorded file maximally using the network bandwidth.
Remote Host	Multiple cast group	• Set MULCAST address and port. • Enable MULCAST function. • Current series IPC **does not** support this function right now.
	PPPOE	• Input the PPPoE user name and password you get from the IPS (internet service provider) and enable PPPoE function. Please save current setup and then reboot the device to get the setup activated. • Device connects to the internet via PPPoE after reboot. You can get the IP address in the WAN from the IP address column.

Email

The email interface is shown as in Figure 3-16.

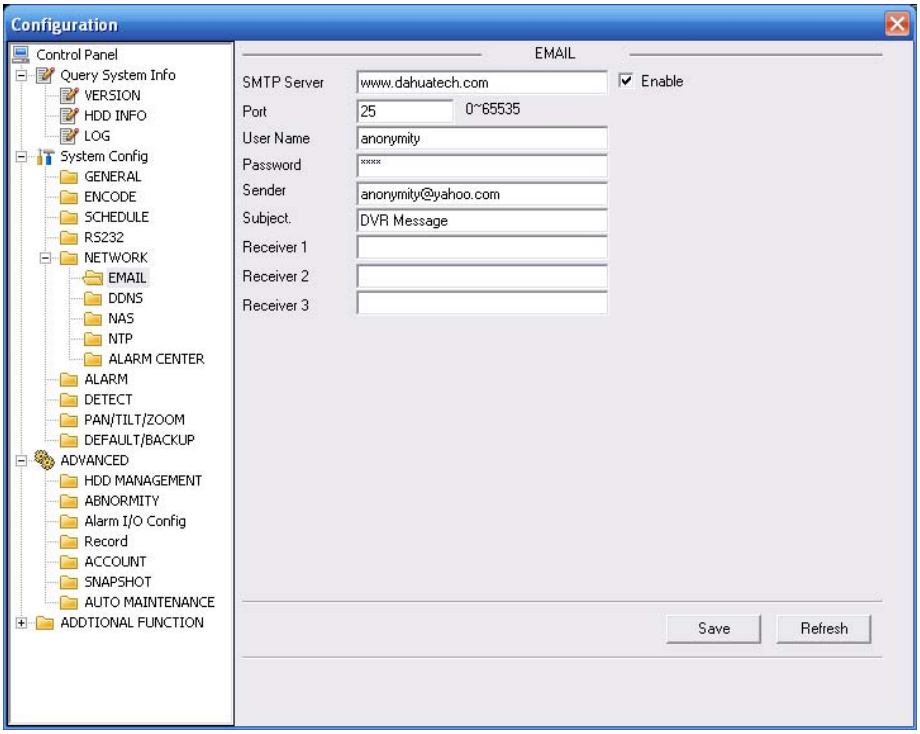

Figure 3-16 Email

Please refer to the following sheet for detailed information.

Parameter	Function
SMTP Server	Input server address and then enable this function.
Port	Default value is 25. You can modify it if necessary.
User Name	The sender email account user name.
Password	The sender email account password.
Sender	Sender email address.
Subject	Input email subject here.
Address	Input receiver email address here. Max three addresses.

DDNS

The DDNS interface is shown as in Figure 3-17.

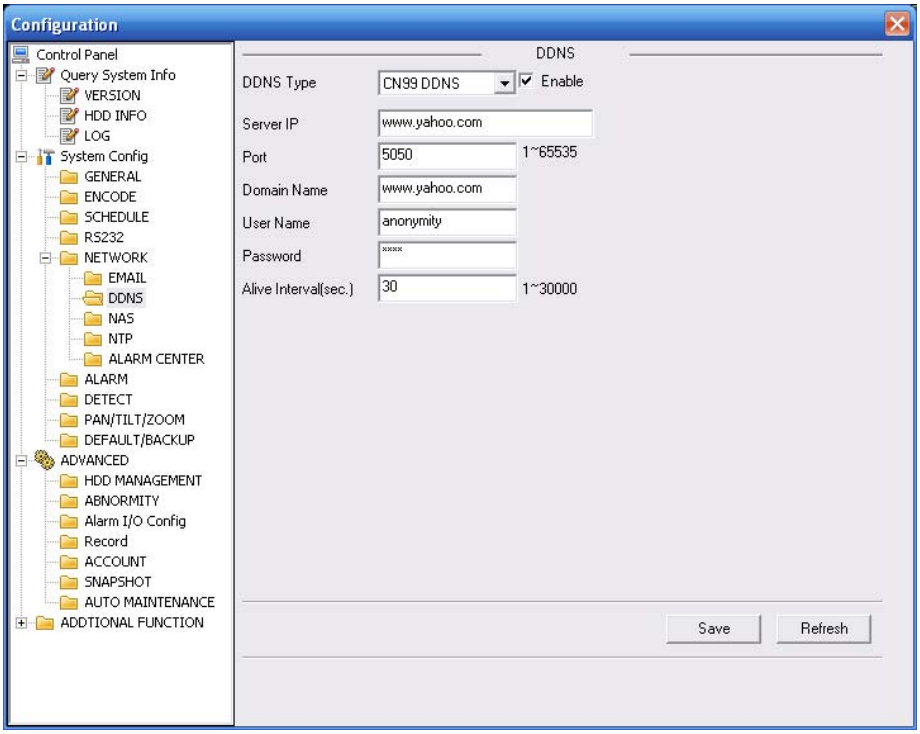

Figure 3-17 DDNS

Please refer to the following sheet for detailed information.

You can refer to the Appendix for NO-IP DDNS setup information.

Parameter	Function
Server Type	You can select DDNS protocol from the dropdown list and then enable DDNS function. The private DDNS protocol means you use your self-defined private protocol to realize DDNS function.
Server IP	DDNS server IP address
Server Port	DDNS server port.
Domain Name	Your self-defined domain name.
User	The user name you input to log in the server.
Password	The password you input to log in the server.
Interval	• Device sends out alive signal to the server regularly. • You can set interval value between the device and DDNS server here.

NAS

NAS interface is shown as in Figure 3-18.

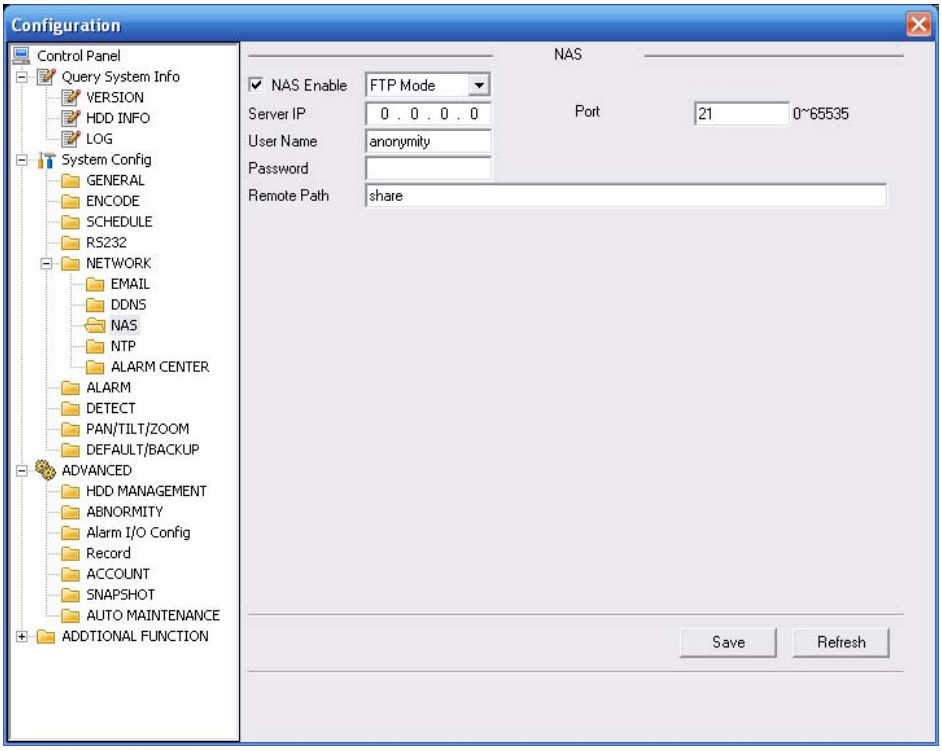

Figure 3-18 NAS

Please refer to the following sheet for detailed information.

Parameter	Function
NAS enable	Please select network storage protocol (FTP) and then enable NAS function. Current series IPC **does not** support this function right now.
Server IP	Input remote storage server IP address.
Port	Input Remote storage server port number.
User Name	Log in user account.
Password	The password you need to log in the server.
Remote Path	Remote storage file path.
Save	You can click save button after you complete setup for one channel, or you can complete the whole setups and then click save button.
Refresh	Click this button to get device latest configuration information.

NTP

The NTP interface is shown as in Figure 3-19.

Here you can realize network time synchronization. Please enable current function and then input server IP, port number, time zone and time.

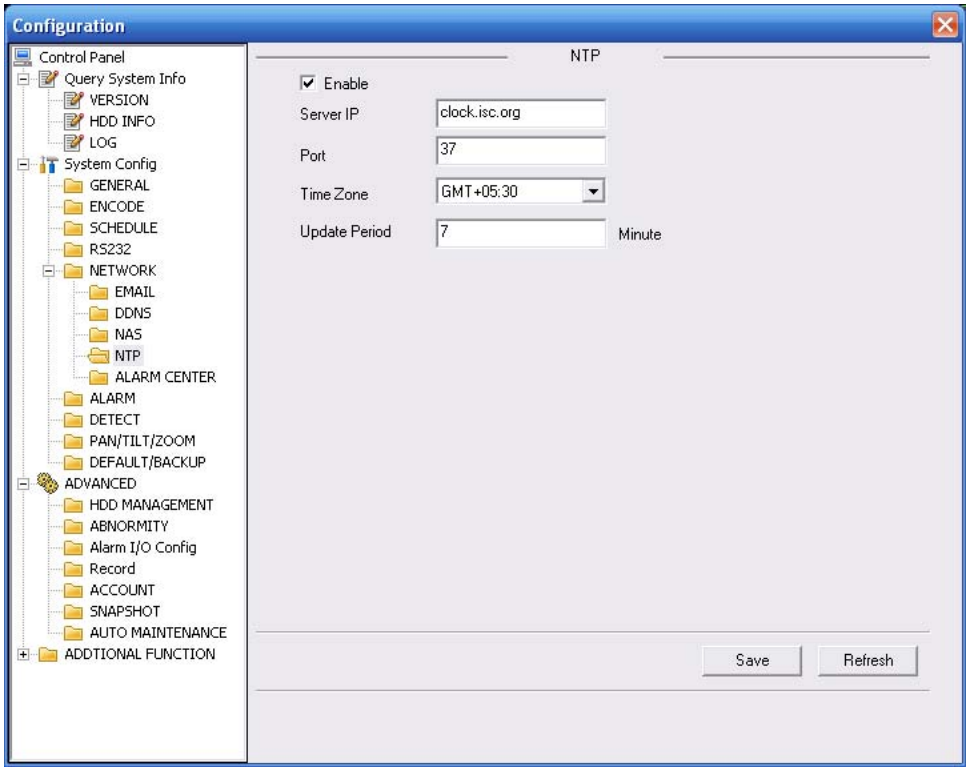

Figure 3-19 NTP

Please refer to the following sheet for detail information.

Parameter	Function
Enable	Enable NTP function or not.
Server IP	Server IP address
Port	Server port.
Time Zone	Device current time zone.
Update Interval	Time update interval value.

3.2.6 Alarm

Alarm setup interface is shown as in Figure 3-20.

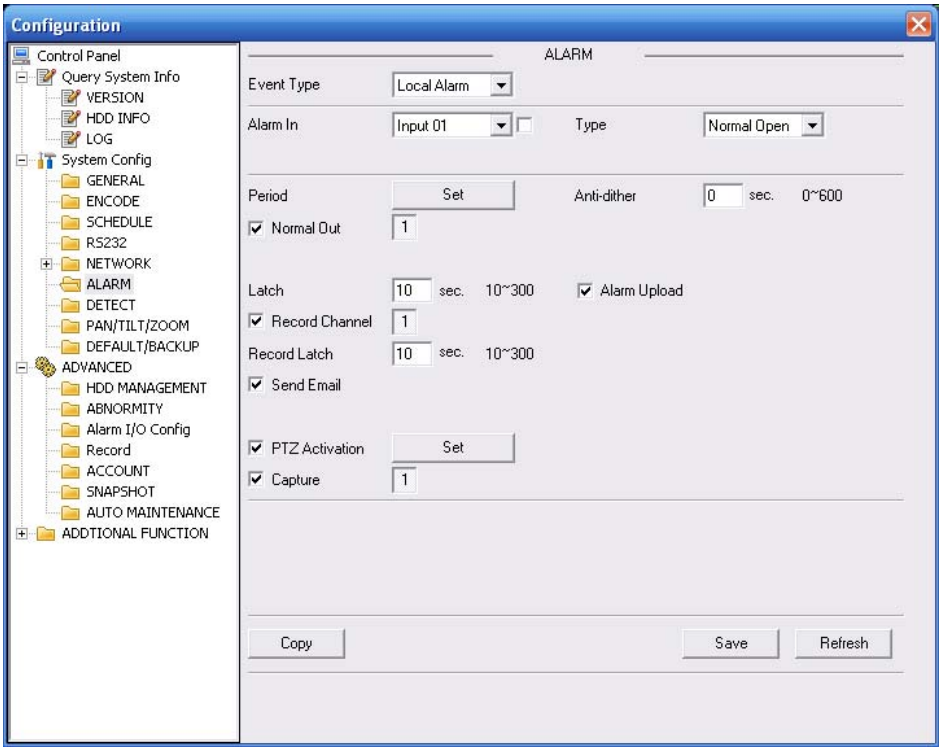

Figure 3-20 Alarm Setup

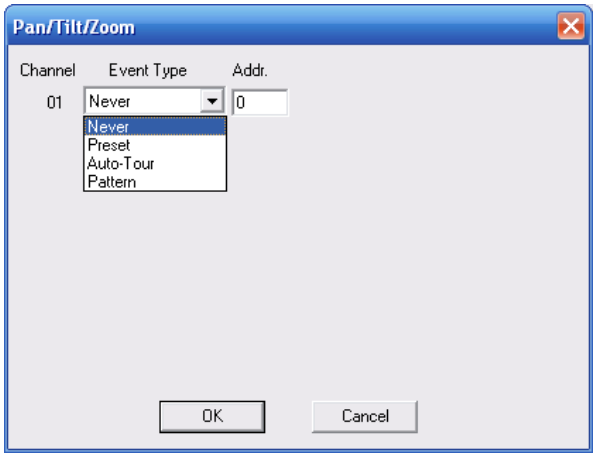

Figure 3-21 PTZ Setup

Please refer to the following sheet for detailed information.

Parameter	Function
Event Type	It includes local alarm/network alarm. • Local alarm: Device detects alarm from input port. • Network: Device detects alarm from network.
Alarm in	Select corresponding alarm channel (ch01).
Enable	You need to draw a circle here so that system can detect the alarm signal.
Type	There are two options: normal open and normal close. NO becomes activated in low voltage, NC becomes activated in high voltage.
Period	• Alarm record function becomes activated in the specified periods. • There are six periods in one day. Please draw a circle to enable corresponding period. • Select date. If you do not select, current setup applies to today only. You can select all week column to apply to the whole week. • Click OK button, system goes back to alarm setup interface, please click save button to exit.
Anti-dither	System only memorizes one event during the anti-dither period. The value ranges from 0 to 15s.
Normal Out	Enable alarm activation function. You need to select alarm output port so that system can activate corresponding alarm device when alarm occurs.
Alarm Latch	System can delay the alarm output for specified time after alarm end The value ranges from 10 seconds to 300 seconds.

Parameter	Function
Record Channel	System auto activates current channel to record once alarm occurs (working with alarm activation function). Please note current device shall be in auto record mode (Chapter 3.2.3 Schedule).
Record Latch	System can delay the record for specified time after alarm ended. Th value ranges from 10s to 300s.
Email	Please draw a circle to enable email function. System can send out email to alert you when alarm occurs and ends.
Tour	• Display the selected video in local monitor window. • This function is not available in current device.
PTZ activation	• Here you can set PTZ movement when alarm occurs. Such as go to preset x when there is an alarm. • The PTZ configuration events include preset, tour, and pattern.
Capture	You need to input capture channel number so that system can backu snapshot file to the SD card or send to the specified email box when alarm occurs.
Copy	It is a shortcut menu button. You can copy current channel setup to one or more (all) channels.
Save	You can click save button after you complete setup for one channel, or you can complete the whole setups and then click save button.
Refresh	Click this button to get device latest configuration information.

3.2.7 Detect

Analysis the video, system enable motion detection alarm when it detects the motion signal reached the specified sensitivity.

The detection interface is shown as in Figure 3-22.

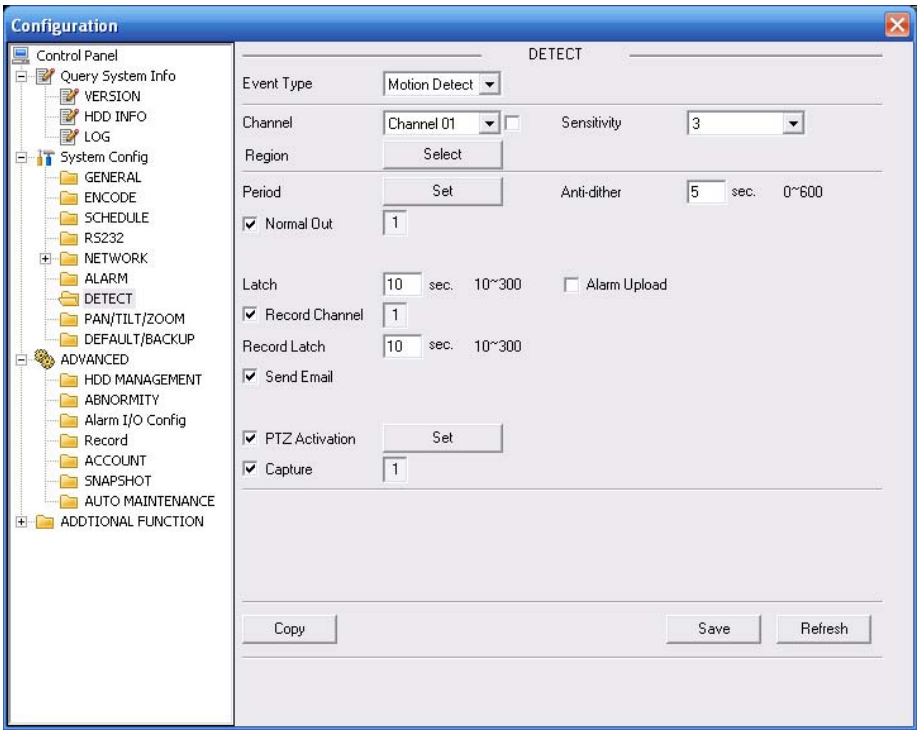

Figure 3-22 Detect

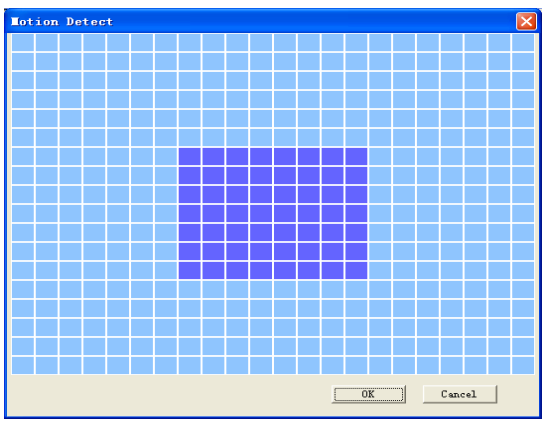

Figure 3-23 Motion Detection Zone Setup

Please refer to the following sheet for detailed information.

Parameter	Function
Event Type	There are three types: Motion detection/video loss/Camera Masking.
Channel	Select channel name from the dropdown list.
Enable	You need to draw a circle to enable motion detection function.

Parameter	Function
Sensitivity	There are six levels. The sixth level has the highest sensitivity.
Region	• There are six levels. The sixth level has the highest sensitivity. • Region: If you select motion detection type, you can click this button to set motion detection zone. The interface is shown as in Figure 3-23. There are PAL 22X18/NTSC 22X15 zones. Right click mouse you can go to full-screen display mode. Do remember clicking OK button to save your motion detection zone setup.
Period	• Motion detection function becomes activated in the specified periods. • There are six periods in one day. Please draw a circle to enable corresponding period. • Select date. If you do not select, current setup applies to today only. You can select all week column to apply to the whole week. • Click OK button, system goes back to motion detection interface, please click save button to exit.
Anti-dither	System only memorizes one event during the anti-dither period. The value ranges from 0s to 15s.
Normal out	• There is 1-channel alarm output. • Corresponding to motion detection alarm output port. • Enable alarm activation function. You need to select alarm output port so that system can activate corresponding alarm device when alarm occurs.
Alarm latch	System can delay the alarm output for specified time after alarm end The value ranges from 10s to 300s.
Record channel	System auto activates motion detection channel to record once alarm occurs (working with motion detection function). Please note you need to go to Chapter 3.2.3 Schedule to set motion detection record period and go to chapter 3.3.3 record to set current period as auto record.
Record latch	System can delay the record for specified time after alarm ended. The value ranges from 10s to 300s.
Email	If you enabled this function, System can send out email to alert you when alarm occurs and ends.
PTZ Activation	• Here you can set PTZ movement when alarm occurs. Such as go to preset x when there is an alarm.
Capture	You need to input capture channel number so that system can backup motion detection snapshot file.
Save	You can click save button after you complete setup for one channel, or you can complete the whole setups and then click save button.

Parameter	Function
Refresh	Click this button to get device latest configuration information.

3.2.8 PTZ

PTZ interface is shown as in Figure 3-24

Please note, before operation please make sure you have set speed dome address and the IPC and speed dome connection is OK.

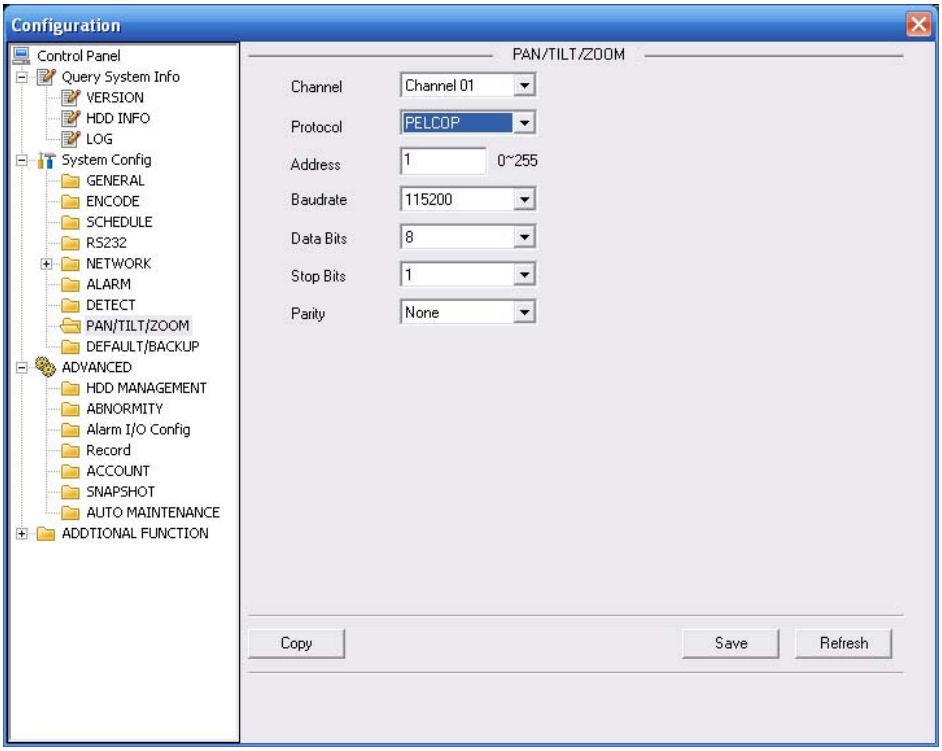

Figure 3-24 PTZ

Please refer to the following sheet for detailed information.

Parameter	Function
Channel	You can select monitor channel from the dropdown list. .
Protocol	Select the corresponding dome protocol.(such as PELCOD)
Address	Set corresponding dome address. Default value is 1. Please note your setup here shall comply with your dome address; otherwise you can not control the speed dome.
Baud Rate	Select the dome baud rate. Default setup is 9600.
Data Bit	Default setup is 8. Please set according to the speed dome dial switch setup.

Parameter	Function
Stop bit	Default setup is 1. Please set according to the speed dome dial switch setup.
Parity	Default setup is none. Please set according to the speed dome dial switch setup.
Save	You can click save button after you complete setup for one channel, or you can complete the whole setups and then click save button.
Refresh	Click this button to get device latest configuration information.

3.2.9 Default & Backup

Default: Restore factory default setup. You can select corresponding items.

Backup: Export current configuration to local PC or import configuration from current PC.

Please refer to Figure 3-25.

Please note system can not restore some information such as network IP address.

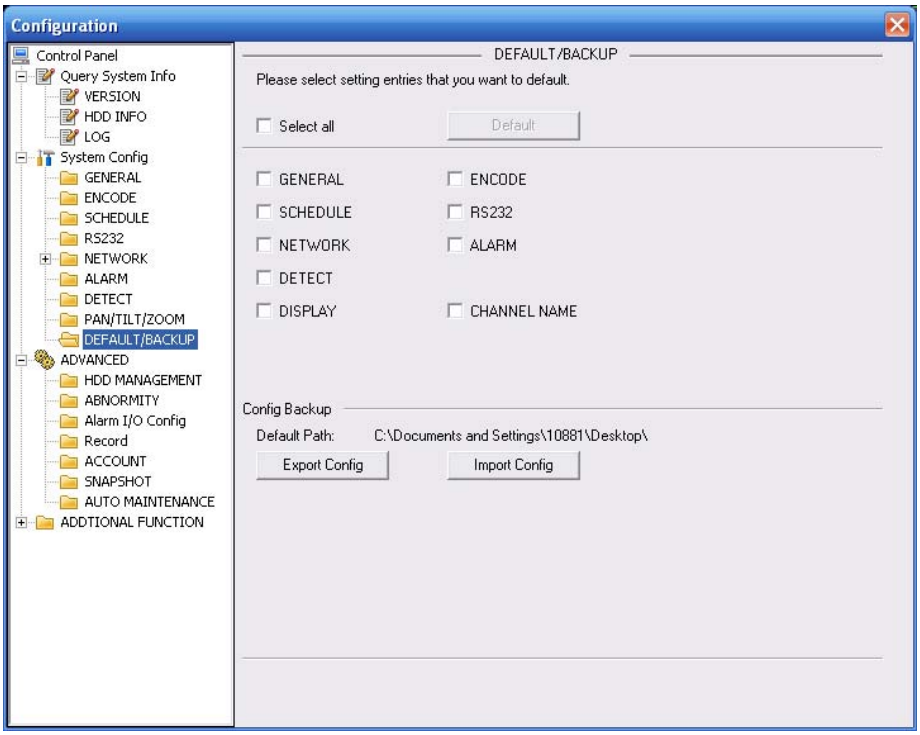

Figure 3-25 Default and Backup

Please refer to the following sheet for detailed information.

Parameter	Function
Select All	Restore factory default setup.

Parameter	Function
Export Configuration	Export system configuration to local PC.
Import Configuration	Import configuration from PC to the system.

3.3 Advanced

3.3.1 HDD Management

HDD management includes net storage management and local storage management.

Please note, if you want to use local storage function, your storage device need to support current function.

Please select the storage device first and then you can see the items on your right become valid. You can check the corresponding item here. See Figure 3-26.

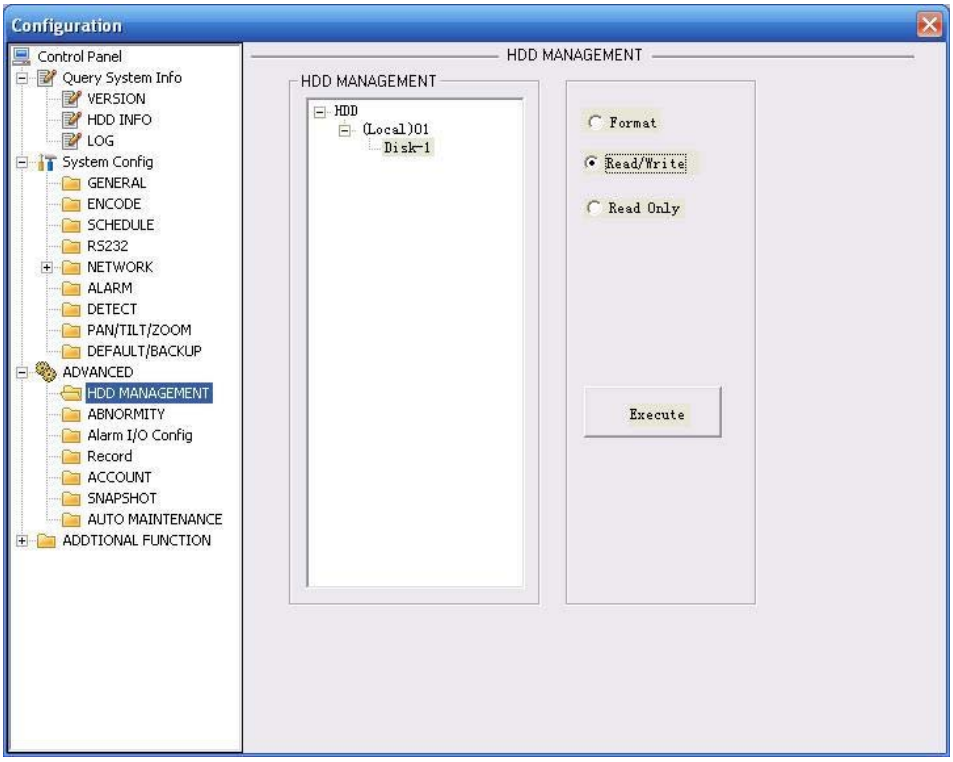

Figure 3-26 HDD Management

Please refer to the following sheet for detailed information.

Parameter	Function
Format	Clear data in the disk.

Parameter	Function
Read/write	Set current disk as read/write
Read only	Set current disk as read.
Execute	Click this button to save disk current status.

3.3.2 Alarm I/O

Here you can search alarm output status. See Figure 3-27.

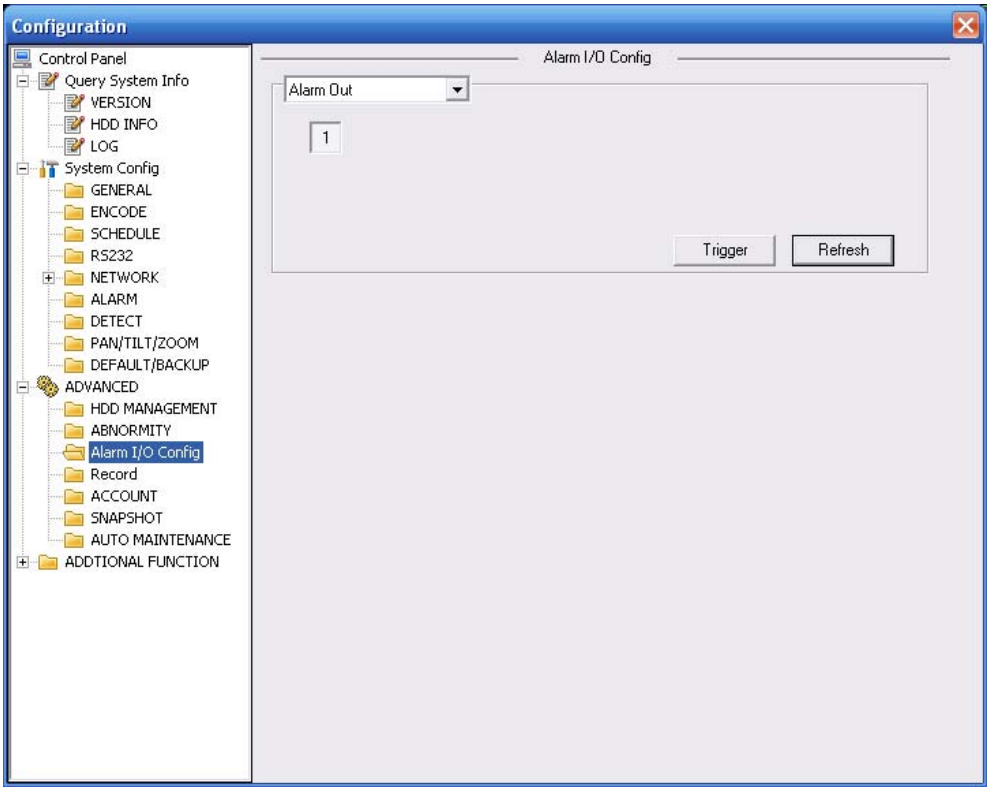

Figure 3-27 Alarm I/O Configuration

Please refer to the following sheet for detailed information.

Parameter	Function
Alarm output	There is only one output channel. Please click the button 1.
Trigger	Enable/disable alarm output device.
Refresh	Search alarm output status.

3.3.3 Record

Record control interface is shown as in Figure 3-28.

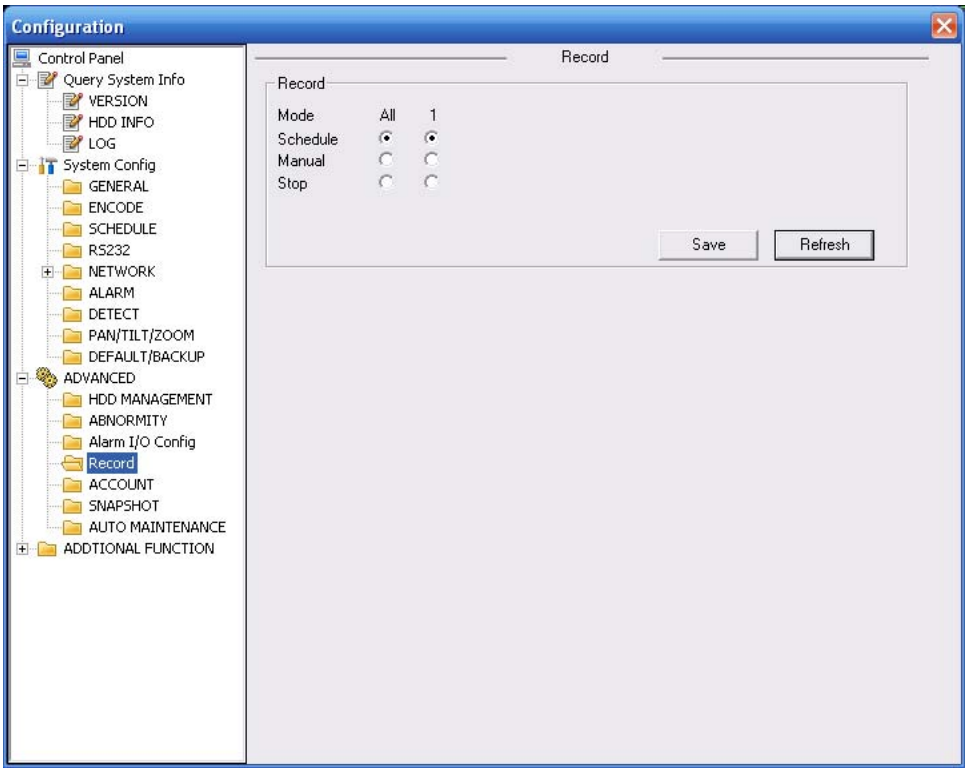

Figure 3-28 Record

Please refer to the following sheet for detailed information.

Parameter	Function
Auto	System enables auto record function as you set in record schedule setup.
Manual	Enable corresponding channel to record no matter what period applied in the record setup.
Stop	Stop current channel record no matter what period applied in the record setup.

3.3.4 Account

Here you can add, remove user or modify password. See Figure 3-29.

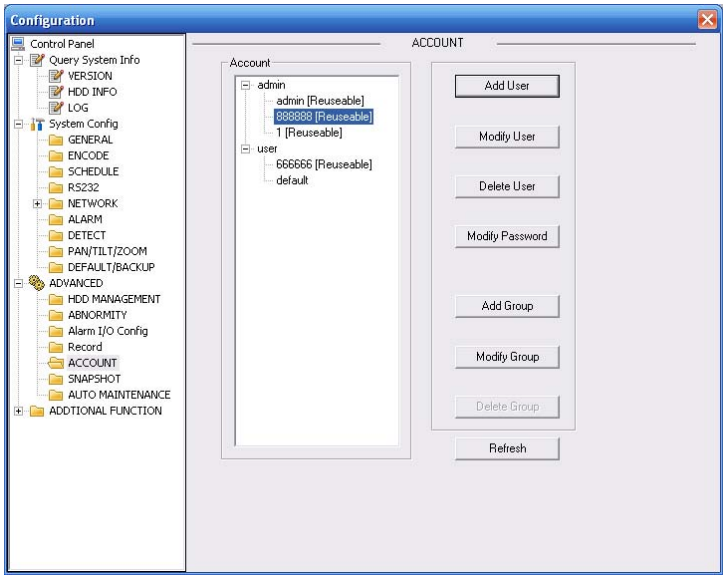

Figure 3-29 Account

3.3.5 Auto Maintenance

Here you can select auto reboot and auto delete old files interval from the dropdown list. See Figure 3-30.

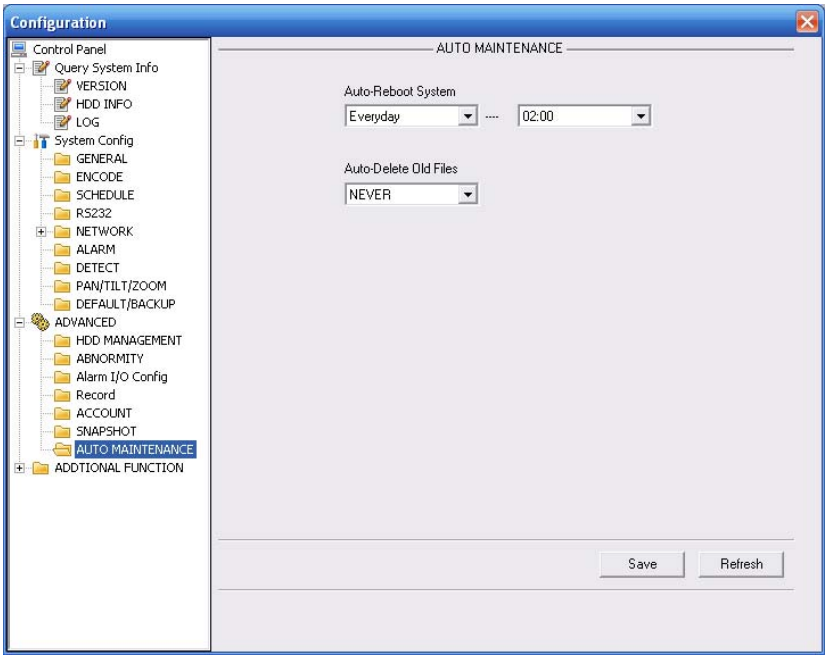

Figure 3-30 Auto Maintenance

3.3.6 Snapshot

Snapshot interface is shown as in Figure 3-31.

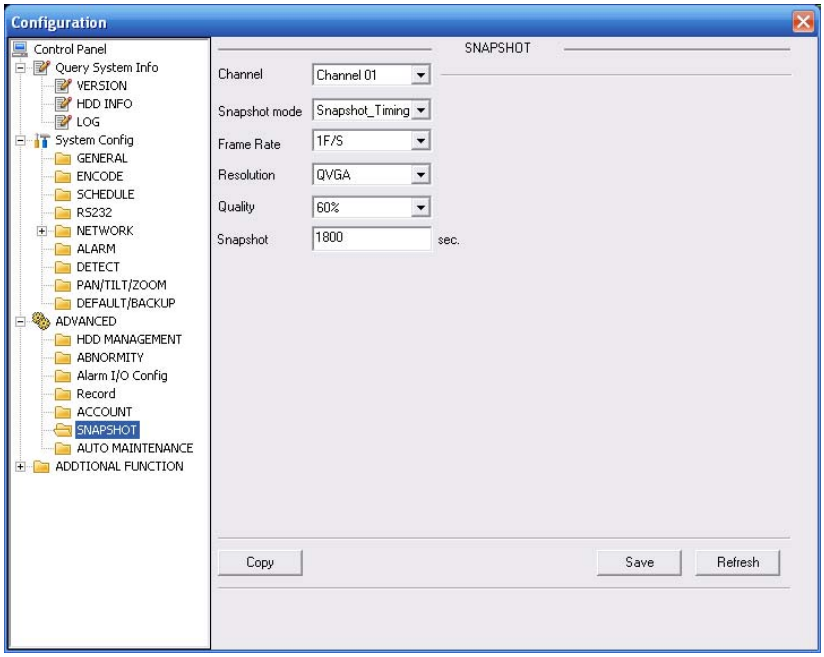

Figure 3-31 Snapshot

Please refer to the following sheet for detailed information.

Parameter	Function
Channel	It is the monitor channel.
Snapshot mode	There are two modes: Timing and activation.
Frame rate	You can select from the dropdown list. The value ranges from 1f/s to 8f/s.
Resolution	You can select from the dropdown list. The options include: UXGA/D1 /CIF/QVGA. The resolution may vary due to different series. Please note F726 series supports UXGA/D1 only.
Quality	You can select from the dropdown list. Here is for you to set video quality.

3.3.7 Abnormity

The abnormity interface is shown as below. See Figure 3-32.

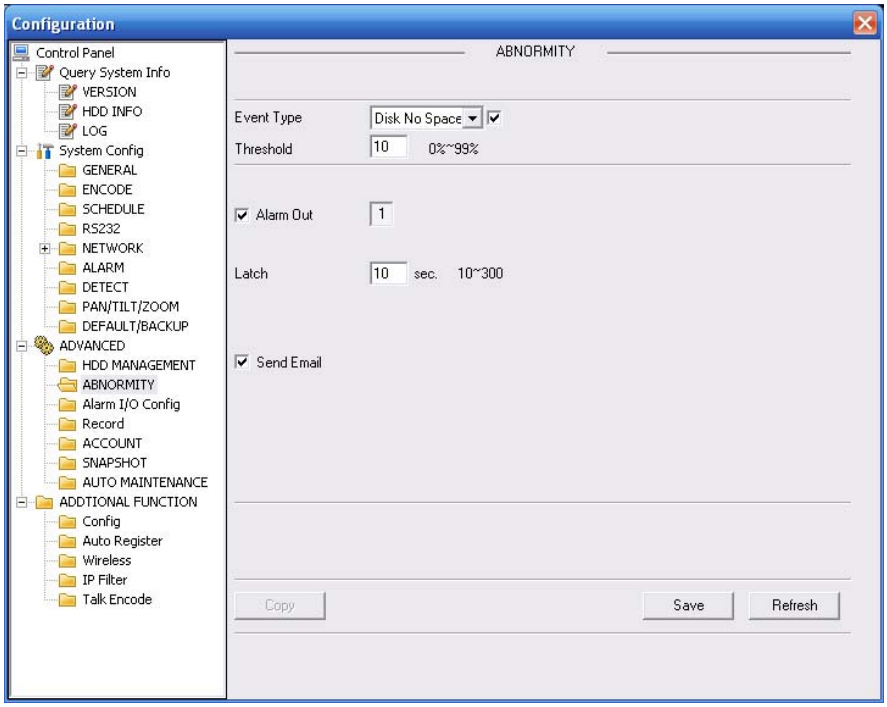

Figure 3-32 Abnormity-1

IPC offline interface is shown as below. See Figure 3-33.

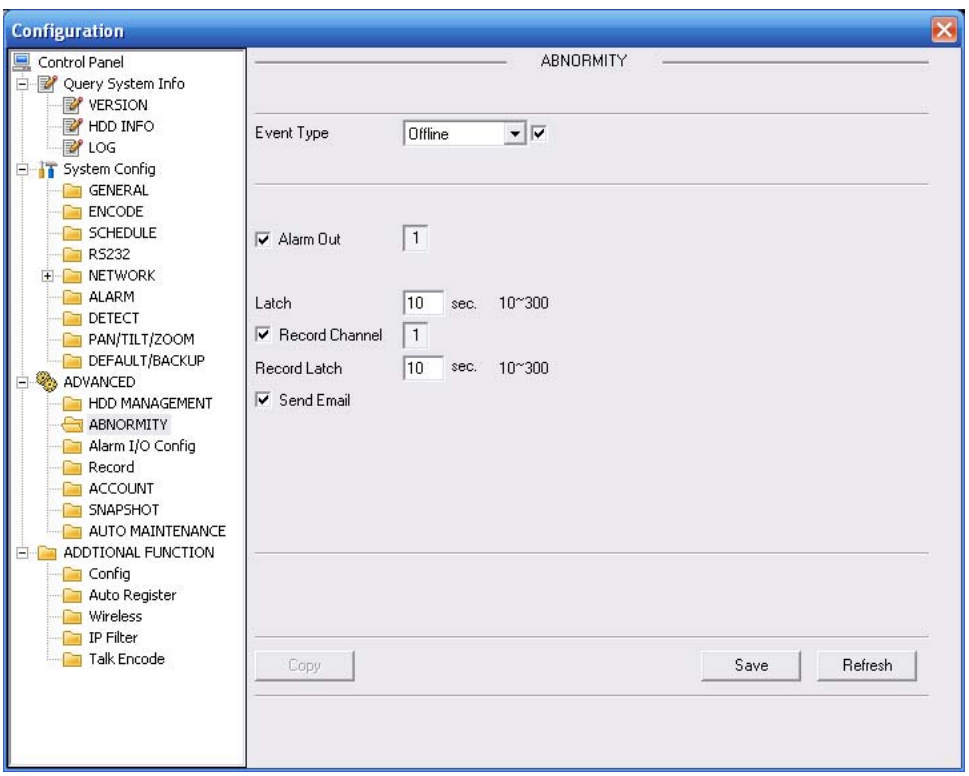

Figure 3-33 Abnormity-2

Please refer to the following sheet for detailed information.

Parameter	Function
Event Type	• The abnormal events include: no disk, no space, disk error, net error, IP conflict. • Threshold: You can set the minimum percentage value here. The device can alarm when capacity is not sufficient. • You need to draw a circle to enable this function.
Normal Out	The corresponding alarm output channel when alarm occurs, There is one channel.
Record channel	System auto activates channel to record once alarm occurs (For offline type only. See Figure 3-33.). Please note you need to go to chapter 3.3.3 record to set current period as auto record.
Record latch	System can delay the record for specified time after alarm ended. The value ranges from 10s to 300s.
Latch	The alarm output can delay for the specified time after alarm stops. The value ranges from 10s to 300s.
Send email	If you enable this function, system can send out email to alarm the specified user. This function is invalid when network error occurs.

3.4 Additional Function

3.4.1 Configure

Here you can set camera property parameter. See Figure 3-34.

The following interface may vary due to different IPC series.

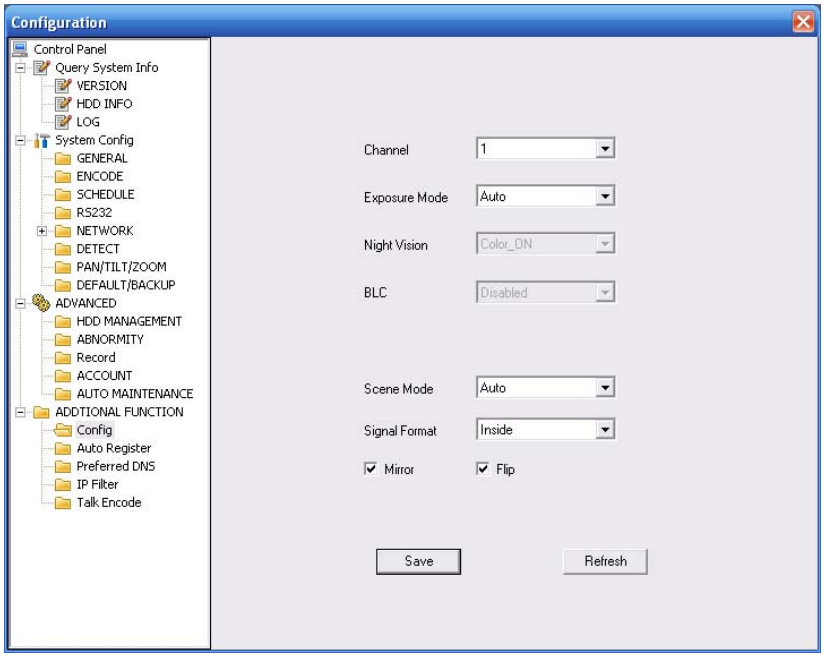

Figure 3-34 Configure

Please refer to the following sheet for detail information.

Parameter	Function
Channel	Monitor channel 1
Exposure Mode	There are two modes: Auto exposure (AE) and Manual exposure (ME). There are some ME time ranges from 1/50 to 1/10000.
Day/Night Mode	IPC day night mode switch. There are three options: color-off/color-on/auto.
BLC	Backlight compensation level There are four levels: Off/weak/middle/strong.
White Balance	White balance is auto by default. The setup here is read-only.
Auto Iris	You can enable or disable the auto iris. Please make sure your iris supports this function.
Scene Mode	You can select the corresponding mode for various environments so that you can get the best video effect. The option includes: disable/auto/sunny/cloudy/home/office/night.
Signal Standard	Video input mode: internal input.

Mirror	It is to switch video left and right limit. Please note current series IPC **does not** support this function.
Flip	It is to switch video up and bottom limit. Please note current series IPC **does not** support this function.

3.4.2 Auto Register

Auto register interface is shown as below. See Figure 3-35.

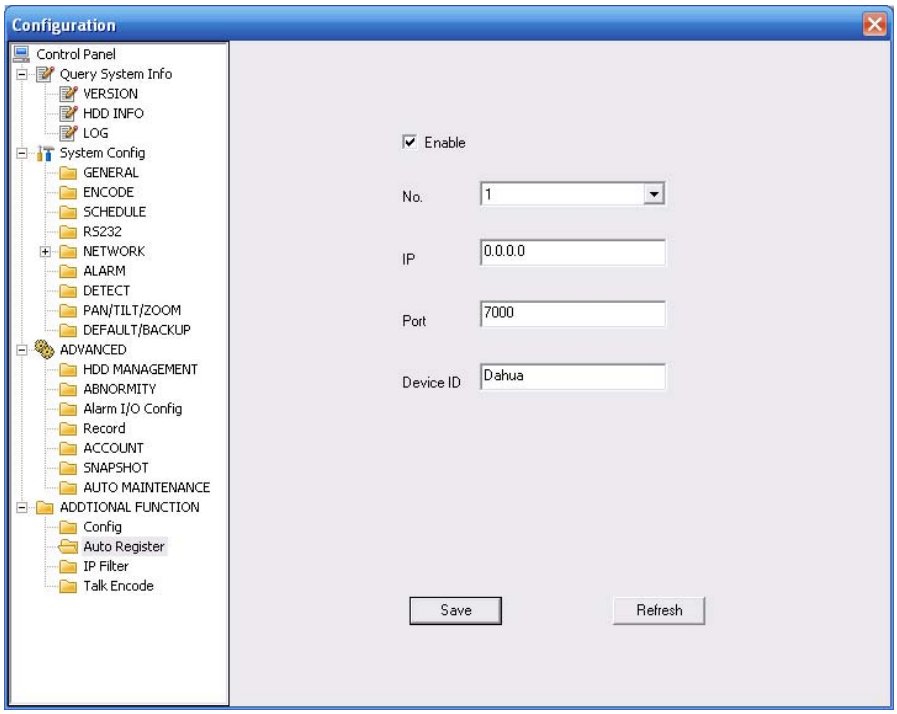

Figure 3-35 Auto Register

Please refer to the following sheet for detailed information.

Parameter	Function
Enable	Enable auto register function.
No.	Device management server number.
IP	Device management server IP address.
Port	Server port number.
Device ID	Device ID in the device management server.

3.4.3 Talk Encode

Here you can set AMR audio compression bit rate. It ranges from AMR59～AMR475.See Figure 3-36.

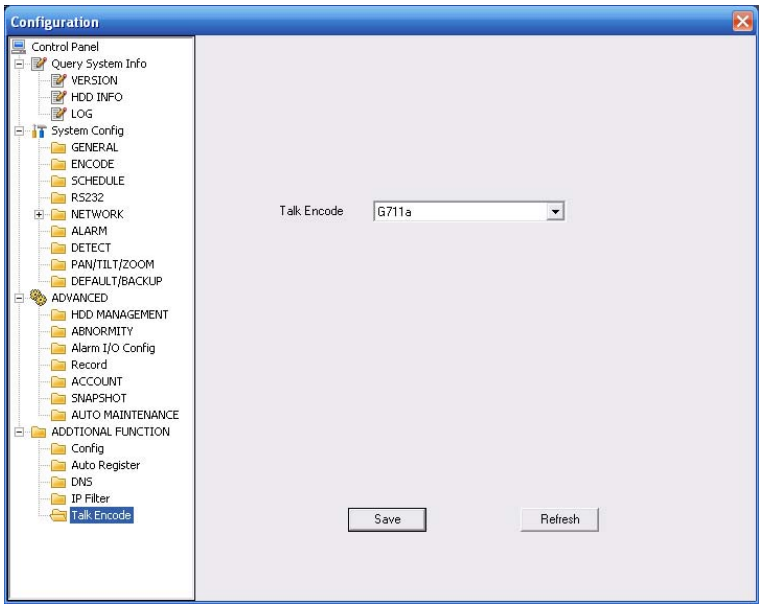

Figure 3-36 Talk Encode

3.4.4 IP Filter

You can enable IP filter function so that some specified IP user can access the IPC. See Figure 3-37.

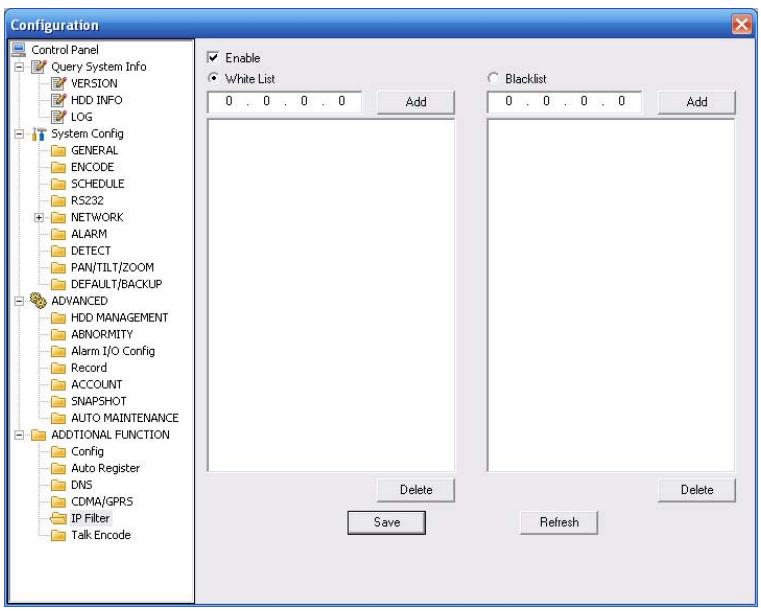

Figure 3-37 IP Filter

3.4.5 DNS

Here you can set server or local operator DNS address. See Figure 3-38.

This function is useful when you input domain name in some item. Otherwise system can not parse the domain name.

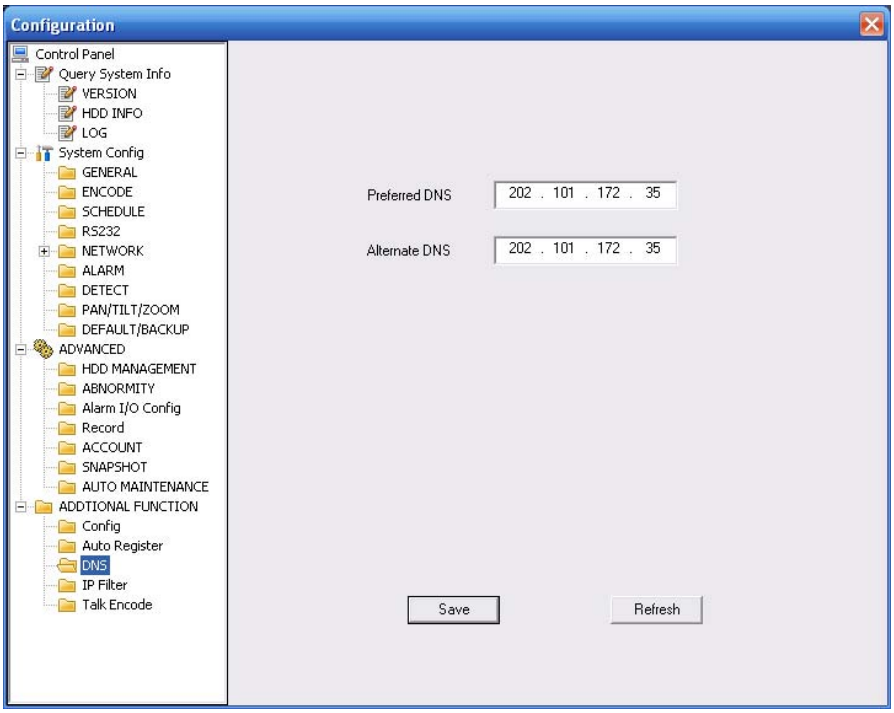

Figure 3-38 DNS

3.4.6 Wireless Network (For –W series only)

After you connected to the WiFi module, you can use WEB to set wireless router setup.

Please follow the steps listed below:

- Click SSID search button to search wireless router available. See Figure 3-39.
- Click enable button.
- Double click the wireless router ID available to implement setup. Wireless network modes, WEP, encryption type are automatically set in accordance with the wireless router.
- If the wireless router adopts WEP encryption, you need to set encryption information manually. See Figure 3-40. Please input encryption mode, password mode and corresponding password and verification mode. Click save button to save current setup. Click refresh button to get latest configuration.

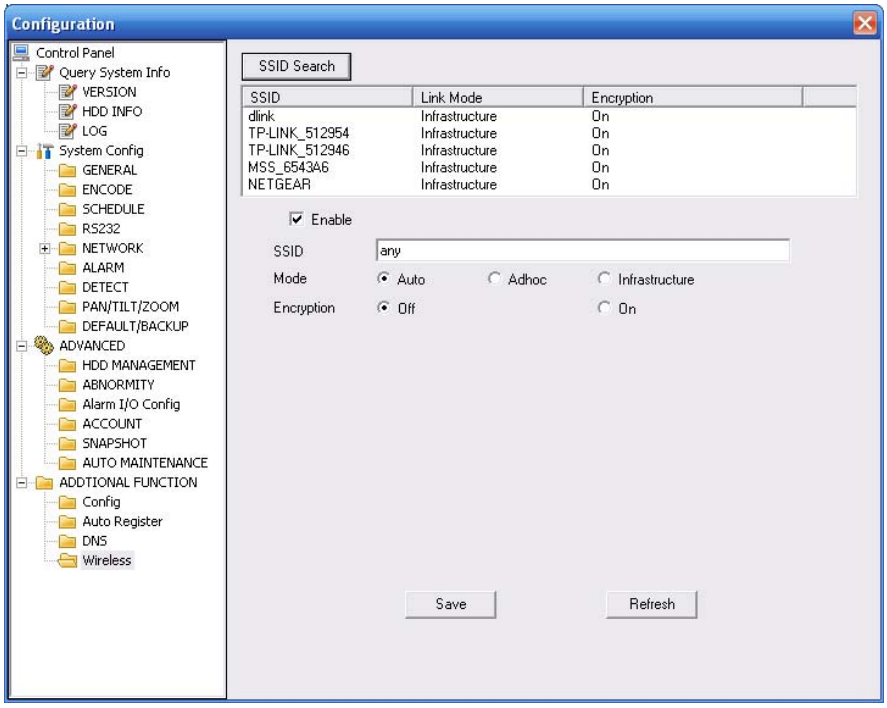

Figure 3-39 Search wireless router

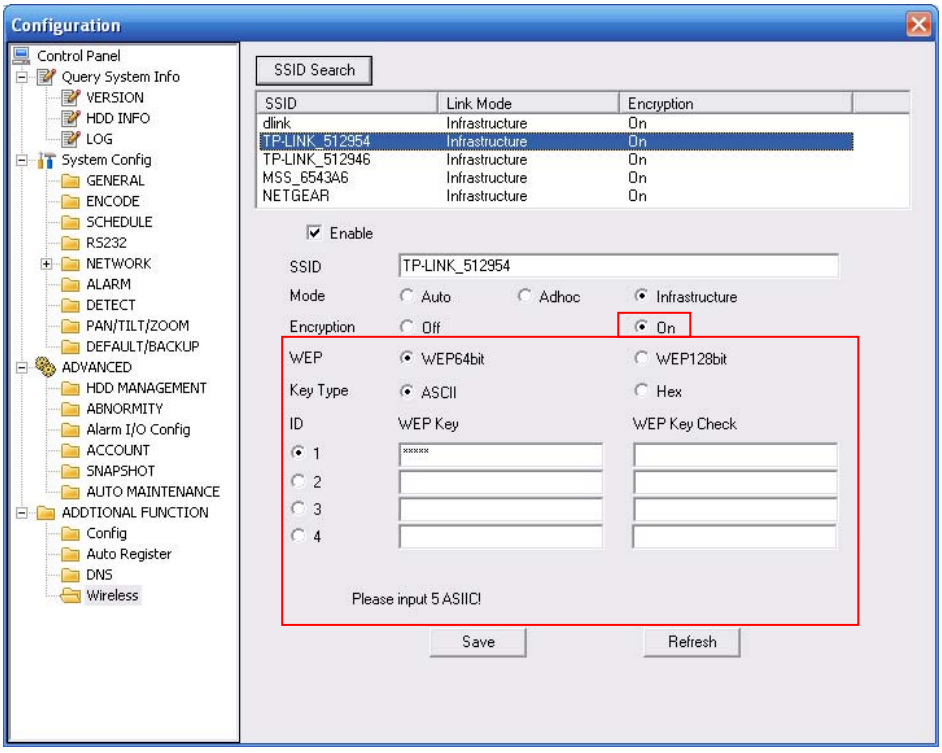

Figure 3-40 wireless router setup

Please refer to the following sheet for detailed information.

Parameter	Function
SSID search	Click this button to search the wireless router available.
Enable	Enable wireless configuration function.
SSID ID	Corresponding wireless router ID
Mode	Wireless network mode. It includes auto, Adhoc and Infrastructure.
Encryption	Enable WEP encryption or not. If you select to disable encryption, you can not see the following items (WEP, Key Type, and ID).
WEP	Select WEP encryption mode. It includes WEP64 bit and WEP128bit.
Key Type	Select password mode. It includes two options: ASCII and hex.
ID	The password to log in the wireless router. Max supports 4 groups.
Save	Click this button to save current setup.
Refresh	Click this button to get device latest configuration.

3.4.7 CDMA/GPRS (For –T/E/C series only)

The CDMA/GPRS interface is shown as below. See Figure 3-41.

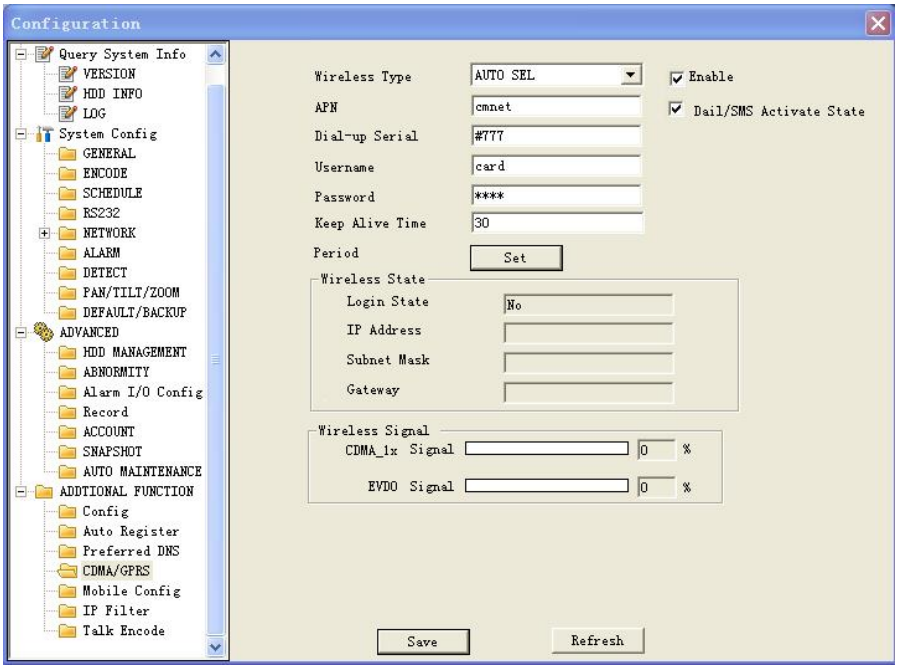

Figure 3-41 CDMA/GPRS

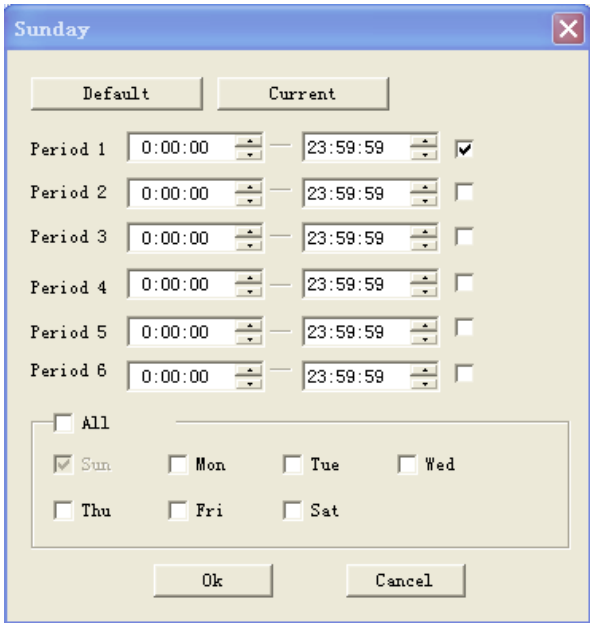

Figure 3-42 Schedule Setup

Please refer to the following sheet for detail information.

Parameter		Function
Wireless type		You can select from the dropdown list.
Enable		Please check the box to enable the selected function.
APN		Please input the connection name here.
Dial/SMS activate state		There are two types for the device to connect to the 3G. It includes the dial-up and sms.
Dial-up number		Please input 3G network dialup number here.
Username		The user name for you to login the 3G network.
Password		The password for you to login the 3G network.
Keep alive time		You can set dialup duration. Default value is 30s.
Period		Click set button, the interface is shown as in Figure 3-42. You can set the period to connect to the 3G network. System only enables wireless network dialup function during the specified period. There are max six periods in one day.
Wireless network	Login status	You can see device has registered to the 3G network or not.

status	IP address	After the Radius server verification, you can see the device IP address the DHCP server allocated to.
	Subnet mask	After the Radius server verification, you can see the device subnet mask the DHCP server allocated to.
	Gateway	After the Radius server verification, you can see the device gateway the DHCP server allocated to.
Wireless signal	CDMA_1X signal	You can view current 3G network signal. • After the device connected to the EVDO module，you can view CDMA_1x network signal. • After the device connected to the W-CDMA or TD module，you can view the EDGE network signal.
	EVDO signal	You can view current 3G network signal. • After the device connected to the EVDO module，you can view EVDO signal. • After the device connected to the W-CDMA module，you can view W_CDMA network signal here. • After the device connected to TD module，you can view TD-SCDMA network signal here.
Save		Click this button to save current setup.
Refresh		Click this button to get device latest configuration.

3.4.8 Mobile Configuration (For –T/E/C series only)

Mobile configuration interface is shown as in Figure 3-43.

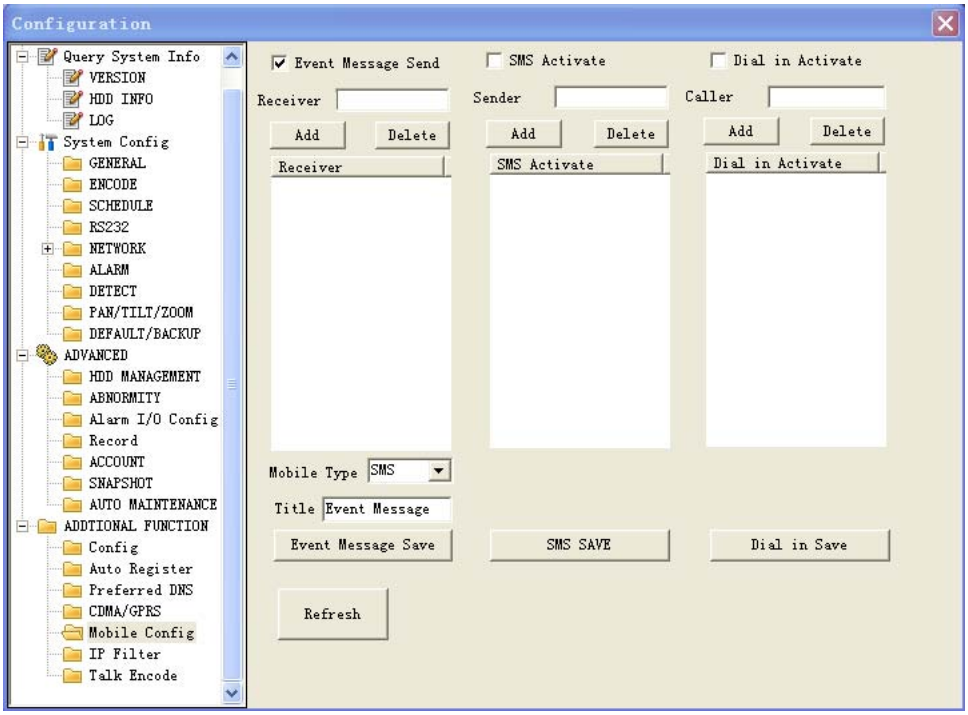

Figure 3-43 Mobile Configuration

Please refer to the following sheet for detail information.

Parameter	Function
Send event message	Device can send the event message (alarm information, motion detection and etc) to the mobile user. You can check the box to enable the function.
Receiver	You can input one or more mobile number(s) here to receive the message.
SMS activate	The mobile user can send out message to activate the device to connect to the 3G network. You need to check the box to enable current function.
Sender	You can input several senders' mobile number here.
Dial activate	The mobile user can give a call to activate the device to connect to the 3G network. You need to check the box to enable current function.
Caller	You can input several senders' mobile number here.
Add	Click it to add the corresponding mobile phone user.
Delete	Click it to remove the corresponding mobile phone user.

Message type	There are two types: SMS and MMS. Right now system supports SMS only.
Title	You can input message subject here.
Event message save	System can save the message receiver number so that device can send out alarm (motion detect) message to the specified mobile phone(s).
SMS save	System can save the mobile phone number which can send out the message to activate the device. Before the operation, please make sure you device can connect to the 3G network and you have enabled the 3G function. When the specified mobile number sends out the message “on” to the device, the device begins 3G dial up and then connect to the 3G network. When the specified mobile number sends out the message “off” to the device, the device disconnects the network and then becomes offline.
Dial save	System can save the mobile phone number which can dial the device to enable it to connect to the 3G network. Before the operation, please make sure you device can connect to the 3G network and you have enabled the 3G function. When the specified mobile phone number gives a call to the device, the user can hear device prompt: The user is busy now. Then the device begins dial up and connects to the 3G network.
Refresh	Click this button to get device latest configuration.

4 Search

Click search button, you can see an interface is shown as in Figure 4-1.

Please select record playback mode, and then select start time, end time and channel. Then please click search button, you can see the corresponding files in the list.

Select the file(s) you want to download and then click download button, system pops up a dialogue box shown as in Figure 4-2 , then you can specify file name and path to download the file(s) to your local pc. Click Ok to complete the download procedure.

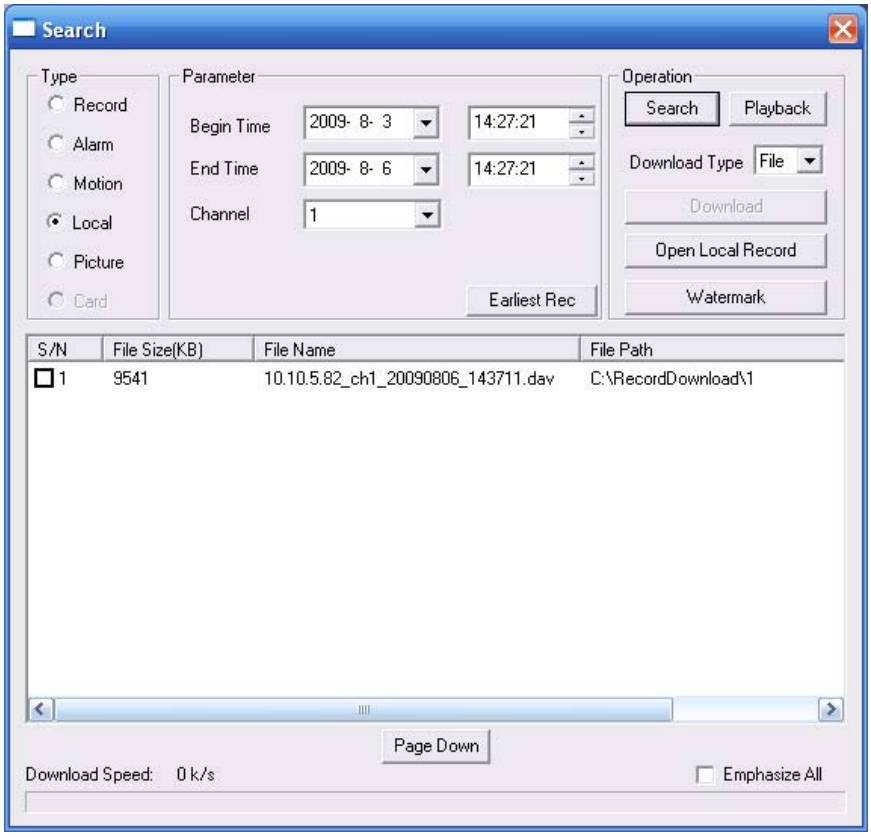

Figure 4-1 Search Main Interface

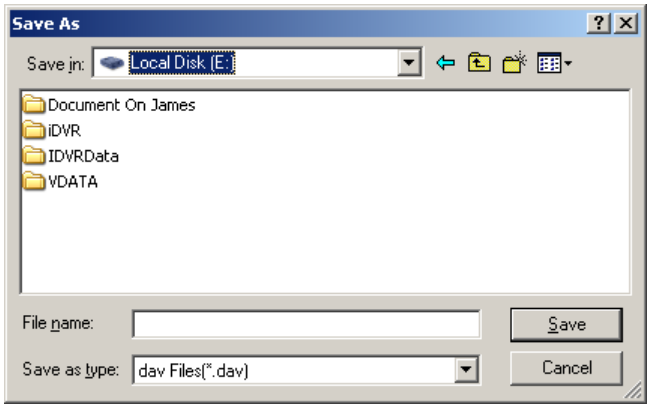

Figure 4-2 Save as

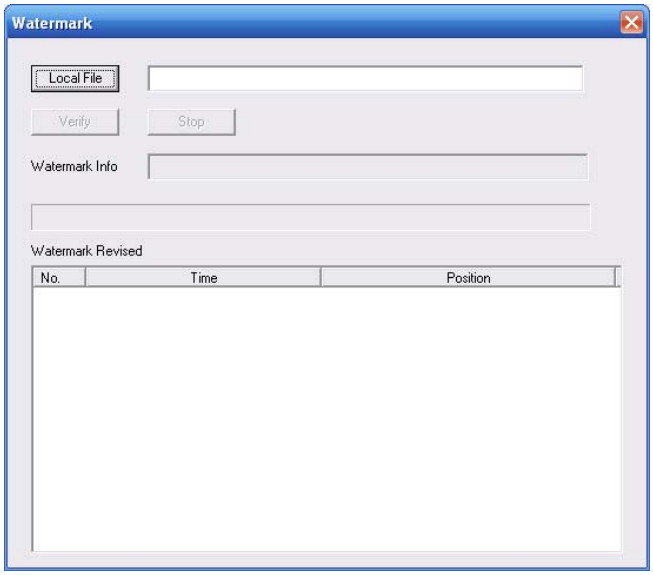

Figure 4-3 Watermark

Please refer to the following sheet for detailed information.

Type	Parameter	Function
Type	Record	Search general record, alarm record and motion detection record.
	Alarm	Search alarm record.
	Motion Detection	Search motion detection record.
	Local	Search local record.
	Picture	Search snapshot file.
	Card	This function is not available in current device.
Item	Start time	Set the file start time.
	End time	Set the file end time.
	Channel	Select the channel from the dropdown list.

Type	Parameter	Function
Operation	Search	Click this button you can view the recorded file matched your requirements.
	Playback	Select the file first and then click playback button to view the video.
	Download type	Download by file: Select the file(s) and then click download button. Download by time: Download the recorded file(s) within your specified period.
	Download	Select the file you need (multiple choices) and then click download button, you can see system pops up a dialogue box. Input the downloaded file name, specify the path and then click OK button. You can see system begins download and the download becomes stop button. There is a progress bar for your reference.
	Open local record	Select local record to play.
	Watermark	**Please note, you need to go to chapter 3.2.2 Encode to enable watermark function first.** Click watermark button, system pops up a dialogue box shown as in Figure 4-3. Default watermark character is DigitalCCTV. Click local file you can select the recorded file. Then you can click verify button to check file is original or not.
Multiple-channel playback		System supports playback one file in several monitor channels.

During the playback process, you can see there are control buttons such as play, pause, stop. slow play and fast play in the play process bar. You can view current playback file channel name, time and data statistics.

5 Alarm

Click alarm function, you can see an interface is shown as in Figure 5-1.

Here you can set device alarm type and alarm sound setup.

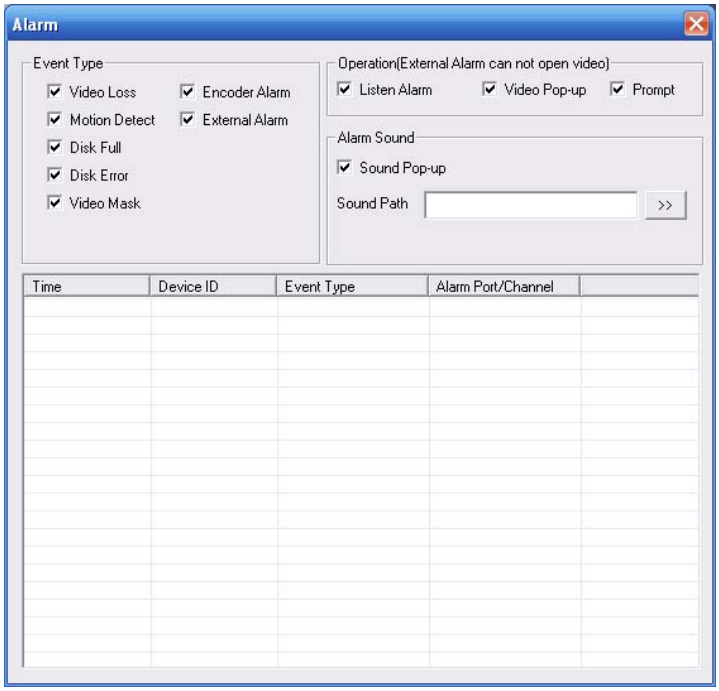

Figure 5-1 Alarm

Please refer to the following sheet for detailed information.

Type	Parameter	Function
Alarm Type	Video loss	System alarms when video loss occurs.
	Motion detection	System alarms when motion detection alarm occurs,
	Disk full	System alarms when disk is full.
	Disk error	System alarms when disk error occurs.
	Camera masking	System alarms when camera is viciously masking.
	Encode alarm	System alarms when encode module alarms.
	External alarm	Alarm input device sends out alarm.
Operation	Listening alarm	System notifies web when alarm occurs (you select from the above event type), and then web can notify user.
	Video	When alarm occurs, system auto enables video monitor. This function only applies to video detection alarm (motion detection, video loss and camera masking). This function is invalid in external alarm mode.

Type	Parameter	Function
	Prompt	Automatically pops up alarm dialogue box.
	Sound pop up	System sends out alarm sound when alarm occurs. You can specify as you wish.
	Path	Here you can specify alarm sound file.

6 About

Click about button, you can view current web client information. See Figure 6-1.

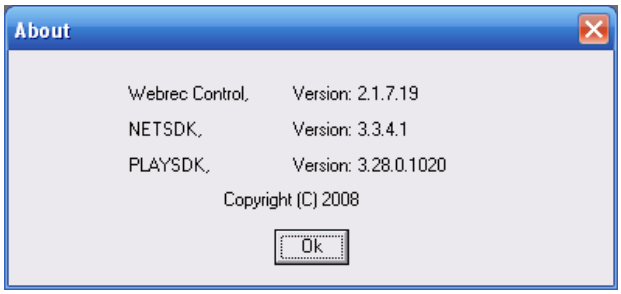

Figure 6-1

7 Log out

Click log out button, system goes back to log in interface. See Figure 7-1.

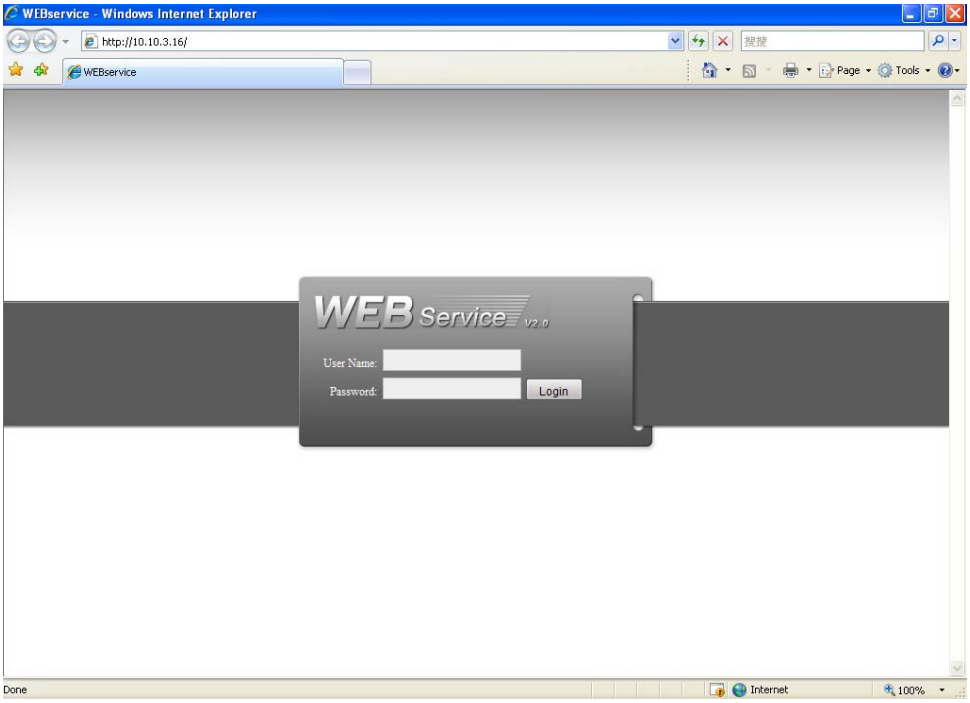

Figure 7-1

8 Appendix No-IP DDNS

Please double click DDNS to go to the configuration interface. You can see an interface is shown as in Figure 8-1.

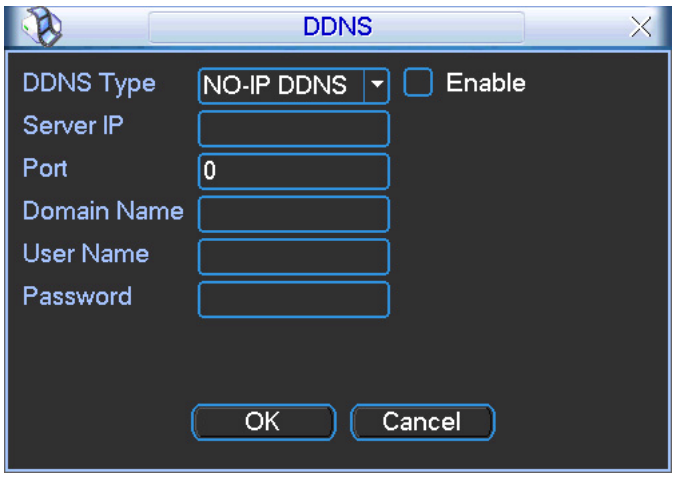

Figure 8-1

- DDNS Type: You can select from the dropdown list. There are five options: No-IP, DynDNS, CN99, Private and Oray.
- Server IP: You can use ping command to get server's IP
- Port: input server port here.
- Domain Name: Get the domain name you get from your DDNS service provider.
- User: Get the user name you get from your DDNS service provider.
- Password: Enter corresponding password.

Highlight the icon ☐ in front of Enable to enable the DDNS server configuration.

It's a system of dynamic DNS service. If you do not have a Static IP address on the Internet, you need to have a dynamic IP. It is to say your IP address changes after a certain period of time.

You can follow the steps listed below to display image on your device even your IP is dynamic.

You need to use a DDNS service and create a domain name that is not necessarily direct use the IP address.

After completed configuration in the device DDNS service can constantly inform the latest device's connection IP, and modify its IP on the table of data from the server. Then we have a constant domain name in the Web browser, along with the HTTP port, send a request to identify the car IP of the domain name typed. The server will direct the domain name to the IP connection, thus allowing access to the device which does not have a fixed IP in the network.

Note: It is important to note that to gain access to the device in a local network, it is necessary to achieve the redirect the port of your modem or router to your device.

To receive domain name in the No-IP DDNS service, please follow the steps listed below.

1. Please visit www.no-ip.com; the page of No-IP appears as below. See Figure 8-2.

Figure 8-2

2. Left click mouse on the "Create Account" button, account Information interface is shown as in Figure 8-3.

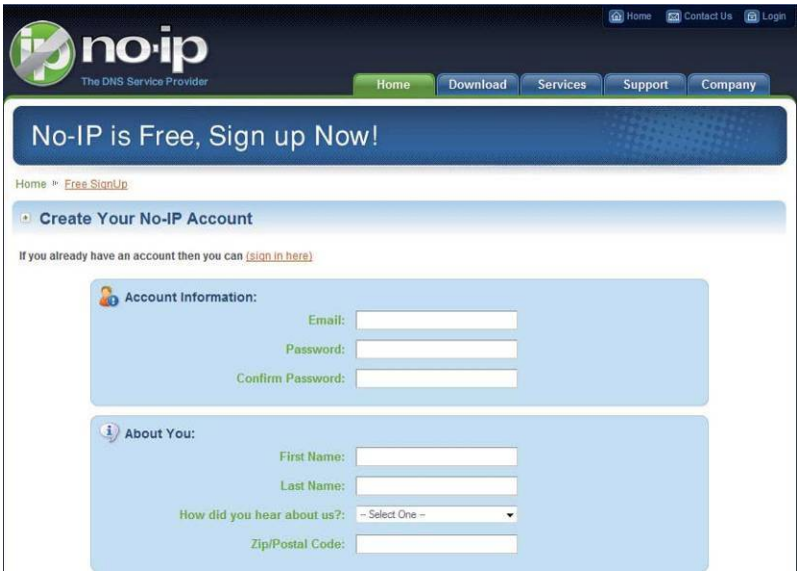

Figure 8-3

3. Fill in the requested fields and click I Accept button. Then you can get an email containing username and password. You can use this account to access the service.

4. Open the e-mail sent by trusted rmação No-IP and double-click the link that is below the phrase "To activate your account please click the following URL:" in the body of the email. See Figure 8-4.

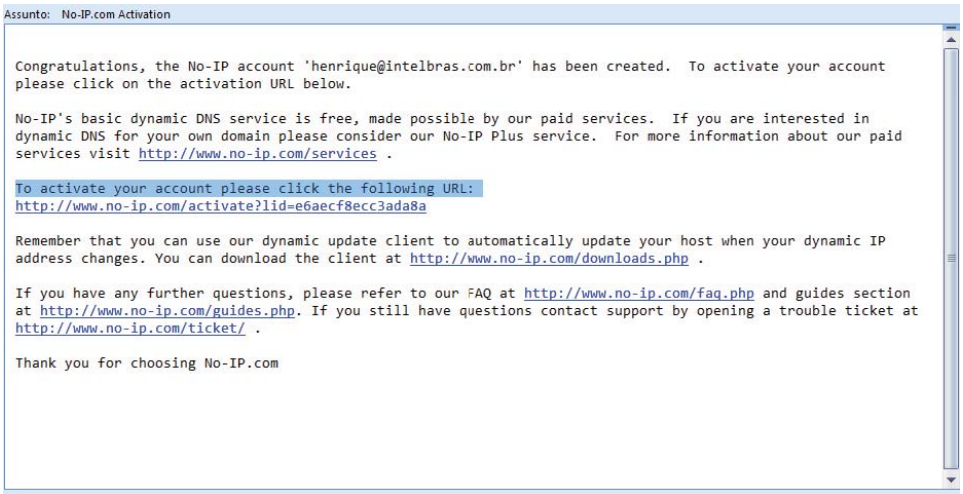
Assunto: No-IP.com Activation
Congratulations, the No-IP account 'henrique@intelbras.com.br' has been created. To activate your account please click on the activation URL below.
No-IP's basic dynamic DNS service is free, made possible by our paid services. If you are interested in dynamic DNS for your own domain please consider our No-IP Plus service. For more information about our paid services visit http://www.no-ip.com/services .
To activate your account please click the following URL:
http://www.no-ip.com/activate?lid=e6aecf8ecc3ada8a
Remember that you can use our dynamic update client to automatically update your host when your dynamic IP address changes. You can download the client at http://www.no-ip.com/downloads.php .
If you have any further questions, please refer to our FAQ at http://www.no-ip.com/faq.php and guides section at http://www.no-ip.com/guides.php. If you still have questions contact support by opening a trouble ticket at http://www.no-ip.com/ticket/ .
Thank you for choosing No-IP.com

Figure 8-4

5. Now you can see an interface is shown as in Figure 8-5. You have successfully created an account.

Home
Contact Us
Login
no-ip
the dns service provider
Home
Download
Services
Support
Company
No-IP is Free, Sign up Now!
Home ▸ Free SignUp
Account Confirmed!
Your account has been confirmed and is now ready for use. Please use the login box above to login to your account.
Please note: Your No-IP Free host names must be updated every 60 days to keep your account active. For an account with no expiration and many other benefits consider No-IP Enhanced or No-IP Plus

Figure 8-5

6. In Figure 8-5, click to sign and enter the email address and password you get earlier. Click “login” to sign up, you can see the welcome interface and configuration option of account. See Figure 8-6. You can highlight manage host item.

Figure 8-6

7. The Manage Hosts interface is shown as in Figure 8-7. Click the Add Host button you can access the creation of a domain name.

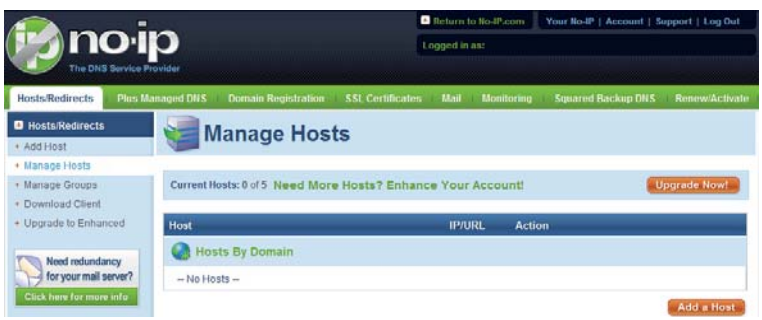

Figure 8-7

8. In Figure 8-8, input corresponding host name in the filed. You can use this name to access device from an external network. In the field to the right of the name, select the desired area. This is your domain name for access to the device. Click “Create Host” button at the bottom of the page.

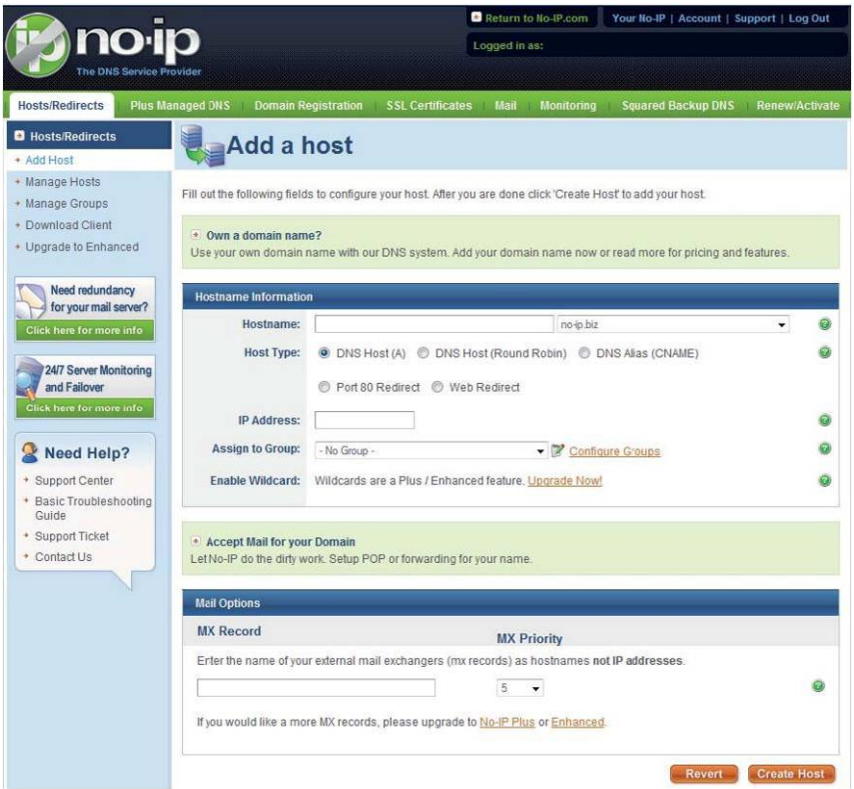
no-ip
The DNS Service Provider
Return to No-IP.com
Your No-IP | Account | Support | Log Out
Logged in as:
Hosts/Redirects
Plus Managed DNS
Domain Registration
SSL Certificates
Mail
Monitoring
Squared Backup DNS
Renew/Activate
Hosts/Redirects
Add Host
Manage Hosts
Manage Groups
Download Client
Upgrade to Enhanced
Need redundancy for your mail server?
Click here for more info
24/7 Server Monitoring and Failover
Click here for more info
Need Help?
Support Center
Basic Troubleshooting Guide
Support Ticket
Contact Us
Add a host
Fill out the following fields to configure your host. After you are done click 'Create Host' to add your host.
Own a domain name?
Use your own domain name with our DNS system. Add your domain name now or read more for pricing and features.
Hostname Information
Hostname:
no-ip.biz
Host Type:
DNS Host (A)
DNS Host (Round Robin)
DNS Alias (CNAME)
Port 80 Redirect
Web Redirect
IP Address:
Assign to Group:
- No Group -
Configure Groups
Enable Wildcard:
Wildcards are a Plus / Enhanced feature. Upgrade Now!
Accept Mail for your Domain
Let No-IP do the dirty work. Setup POP or forwarding for your name.
Mail Options
MX Record
MX Priority
Enter the name of your external mail exchangers (mx records) as hostnames not IP addresses.
5
If you would like a more MX records, please upgrade to No-IP Plus or Enhanced.
Revert
Create Host

Figure 8-8

9. Now you can see an interface is shown as in Figure 8-9. Here you can view domain name and the computer's current IP setup. If you already have a domain name equal to gurado trusted, you must define another name for the host.

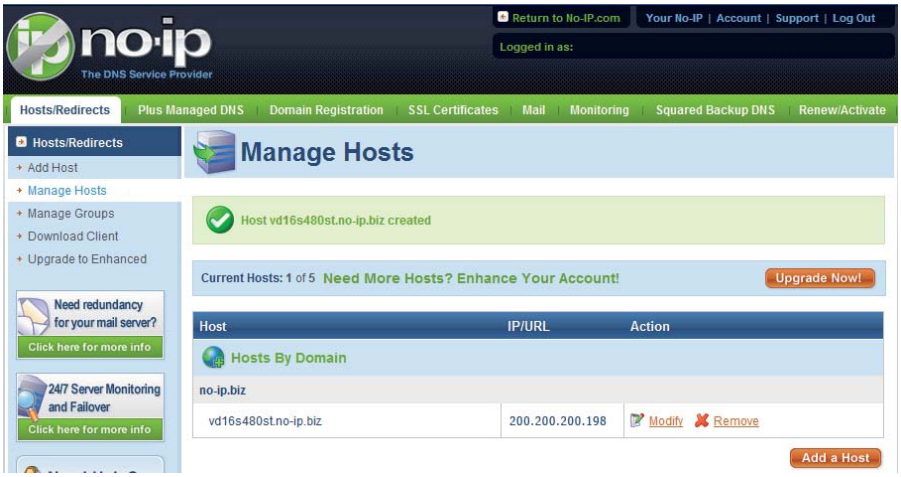

Figure 8-9

10. Now you need to define the definition of the server's IP in IP-device able to access this service DDNS. To get DDNS service, you need to have a computer connected to the Internet on the same network with device. Then please type the command dynupdate. no ping-ip.com at the command prompt, Windows ®. The server's IP will be displayed on the screen. See Figure 8-10. Your device can use this IP to find the No-IP server.

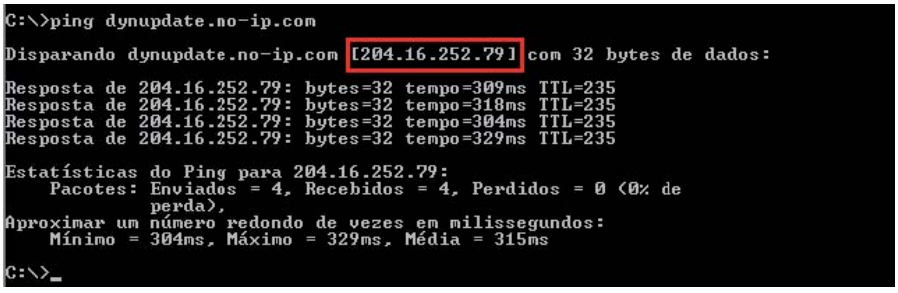
C:\>ping dynupdate.no-ip.com
Disparando dynupdate.no-ip.com [204.16.252.79] com 32 bytes de dados:
Resposta de 204.16.252.79: bytes=32 tempo=309ms TTL=235
Resposta de 204.16.252.79: bytes=32 tempo=318ms TTL=235
Resposta de 204.16.252.79: bytes=32 tempo=304ms TTL=235
Resposta de 204.16.252.79: bytes=32 tempo=329ms TTL=235
Estatísticas do Ping para 204.16.252.79:
Pacotes: Enviados = 4, Recebidos = 4, Perdidos = 0 (0% de perda),
Aproximar um número redondo de vezes em milissegundos:
Mínimo = 304ms, Máximo = 329ms, Média = 315ms
C:\>

Figure 8-10

11. Please go to the device and access the MAIN MENU> SETTING> NETWORK> DDNS. Input server IP you get in the above step. Select the DDNS Type as No-IP DDNS and highlight the icon in front of Enable to enable the DDNS function. Now fill the fields as described below, and click OK to save current setup.

- **Server IP:** Enter the IP noted in step 10.
- **Port:** Enter the port 80.

• **Domain Name:** Enter the domain name created in step 8.

• **User:** Enter your username (email address) created in step 3.

• **Password:** Enter the password created in step 3.

The figure Configuration file of No-IP is shown as in Figure 8-11.

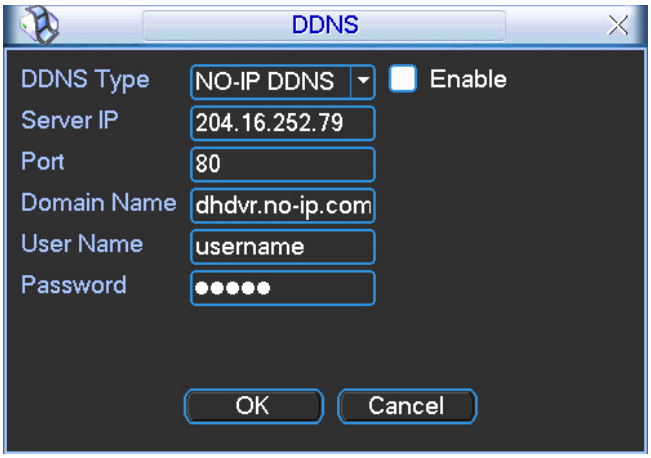

Figure 8-11

12. Now you have completed device setup. Open Internet Explorer ® in another foreign network with Internet access, unlike the network where the device is connected to, you need to follow the steps listed below:

1. Enter the address into your browser: http://nome the field created in step 8. For example: http://vd16s480st.no-ip.biz

2. If the device HTTP port is 80, just type the domain name. Otherwise, enter in the browser address as: http://nome the field created in Step 8: port number of HTTP. For example:

http://vd16s480st.no-ip.biz:9090

3. Press Enter. The system will ask install application webrec.cab control or not. Please click Yes to perform a successful connection.

4. If the page does not appear on the computer screen, you need to lower your system safety setup. From Tools> Internet Options> Security, select Internet and then click Custom Level, you can enable ActiveX controls. See Figure 8-12 . Then open your browser and re-enter the domain name of the device.

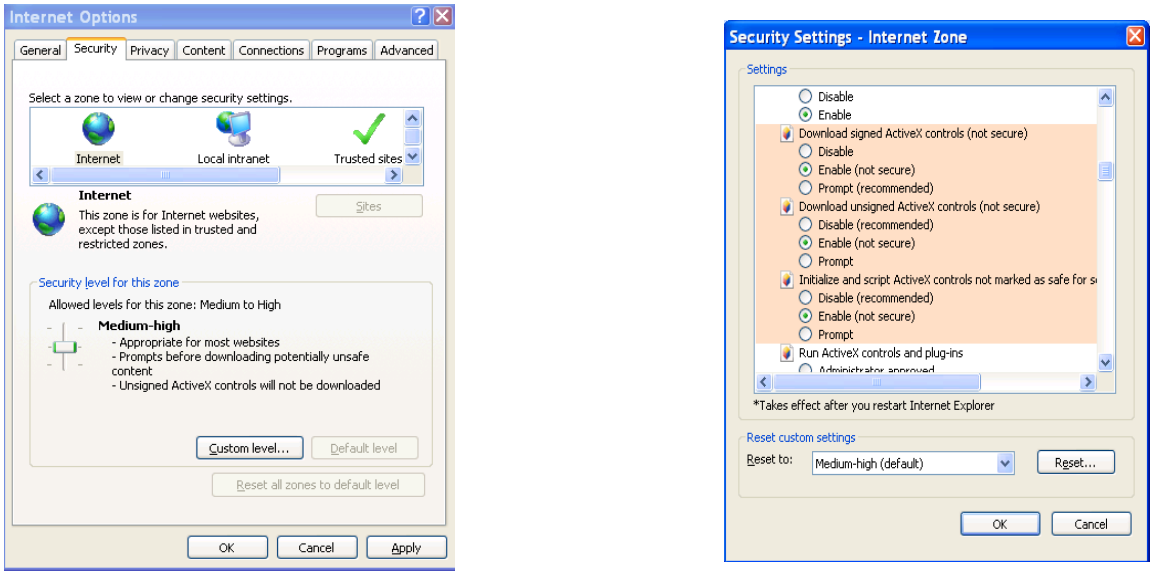

Figure 8-12

Note:

Slight difference may be found in user interface.

All the designs and software here are subject to change without prior written notice.

Please visit our website for more information.